



GEN2 INSTALLATION INSTRUCTIONS

Part# 228-1819

Jeep® JT AIR IT UP® 4 Tire Inflation System
(Requires External Air Source)



The most up-to-date instructions always visit www.UpDownAir.com

Air It Up!



PLEASE TAKE A MINUTE TO READ THIS ENTIRE INSTRUCTION MANUAL BEFORE YOU START.
WE WANT YOU TO HAVE A FUN AND EASY INSTALLATION WITHOUT HURTING YOURSELF OR YOUR JEEP.

SAFETY PRECAUTIONS

If you are working on the ground always use jack stands and chalk any tires touching the ground. Wear safety glasses and gloves as you will be using power tools for this installation. We recommend disconnecting the battery any time you are working on your Jeep.

FOR BEST RESULTS ALL 4 TIRES NEED TO BE CONNECTED

NEVER DRIVE WITH THE WHIPS CONNECTED TO YOUR JEEP MAJOR DAMAGE CAN OCCUR!

**IF YOUR NEW UpDownAir PRODUCT HAS DAMAGED OR IS MISSING PARTS
PLEASE CONTACT UpDownAir CUSTOMER SERVICE DIRECTLY AT :**

833-226-4863 option 4 or info@UpDownAir.com

TOOLS NEEDED

- Cordless Drill
- 5/16" Drill Bit
- Thread Sealer
(**Loctite 577—or Teflon tape**)
- Spray Bottle with Mild Soapy Water
- Phillips Head #2 Screw Driver
- Tube Cutter or Sharp Utility Knife

WRENCHES

- Crescent
- 22mm, 18mm
- 16mm, 14mm
- 13mm, 10mm
- 8mm, 1/4" Allen

3/8" Drive

- Ratchet
- 13mm Deep Socket
- 10mm Socket
- 8mm Socket
- 1/4" Allen Socket

*Special cut 9 /16 socket for 90 degree installation

Secure Jeep and Prep for Installation

This entire install can be done on the ground but jack stands or a lift will make it even easier.

1. Park your Jeep and set the parking brake.
2. Place a blanket on the edge of the roof and windshield of your Jeep and open the hood all the way.
3. Disconnect the negative (-) battery terminal.
4. Begin installation step 1




**Always:**


Use a tube cutter or sharp utility knife.

Do Not:


Fold or kink the Air Line Tube. Cut the Air Line Tube at an angle. Do not use pliers, scissors, snips, saws, or sidecutters.

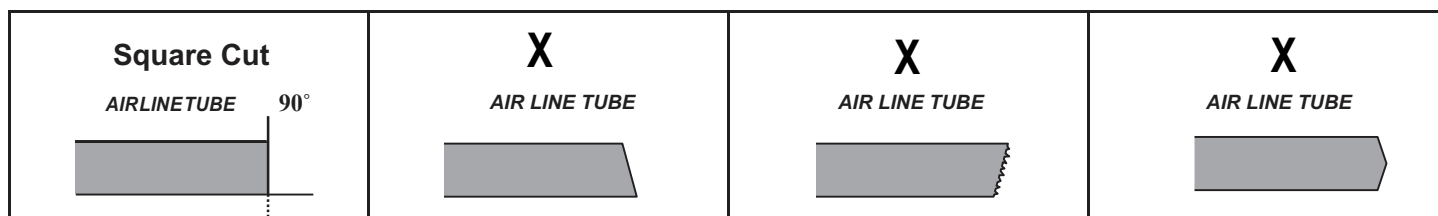PROPER AND IMPROPER CUTS IN THE AIR LINE TUBE


Insert end of Air Line Tube into Air Fitting.

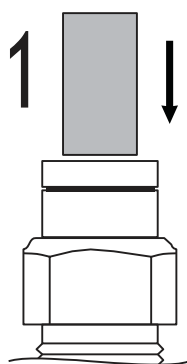


Push Air Line Tube into Air Fitting as far as possible.

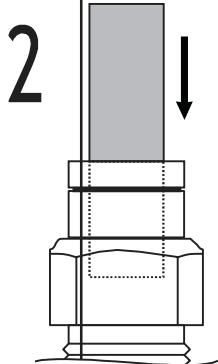

Gently pull on the Air Line Tube to check for a secure fit.

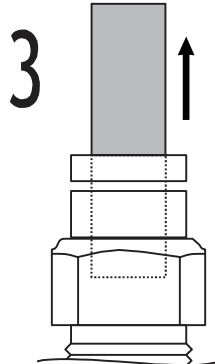

To remove, push down collar and gently pull Air Line Tube away.

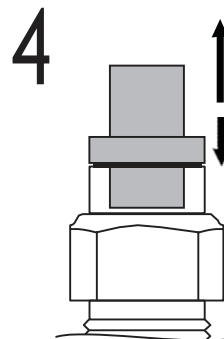

Removal Tip: Use a small open-ended wrench to push the collar down.

Always:

Select routes protected from heat, debris, and sharp edges. Use Nylon Ties to secure the Air Line Tube.

Do Not:

Bend or sharply curve Air Line Tubes. Leave Air Line Tube exposed to sharp edges. Use unnecessary lengths of Air Line Tube. Route Air Line Tube near moving parts. Let Air Line tube hang unsecured from vehicle. Scar Air Line Tube while routing.

**228-1819 - Installation BOM**

PART#	QTY	DESCRIPTION
01-200	8	Quick Release Chucks with Betty Bar
02-108-122	4	3/8" Green Air Line 48"- For Tire Whips

228-1819	1	Jeep JT ADS Controller - 80 max psi
----------	---	-------------------------------------

01-201	4	Body Mount Schrader Valve - Push to Connect
05-133	4	3/8" Flat Washer
01-210	2	3/8" X 3/8" Push to Connect "Y"
01-105	1	3/8" Push to Connect "T"
05-115	10	8" Cable Tie
05-117	4	Vinyl Cap

02-208-231	2	3/8 Black Air Line 144" - 3/8" "Y" to Rear Body Mount Schrader Valve
02-203-229	2	3/8 Split Loom 143" - Cover for 02-100-231

02-200-41	2	3/8 Black Air Line 30" - 3/8" "Y" to Front Body Mount Schrader Valve
02-203-39	2	3/8 Split Loom 15" - Cover for 02-100-41

02-02-73	1	3/8" Black Air Line 28"- From Crossover "T" to Driver Side "Y"
02-104-71	1	3/8" Split Loom 27"- Cover for 02-102-73

02-102-43	1	3/8" Black Air Line 17"- From Crossover "T" to ADS Controller "Y"
02-104-41	1	3/8" Split Loom 16"- Cover for 02-102-43

02-102-157	1	3/8" Black Air Line 62"- Firewall Crossover to "T" and Passenger Side "Y"
02-104-155	1	3/8" Split Loom 61"- Cover for 02-102-157

09-102	1	Whip Bag
--------	---	----------



Overview

The following illustration (Figure 1) will give you an overview of how the UpDown Air® air delivery system works. The illustration will not only help understand how the system works, but also help you identify the parts for installation. Please note that the illustration is not to scale.

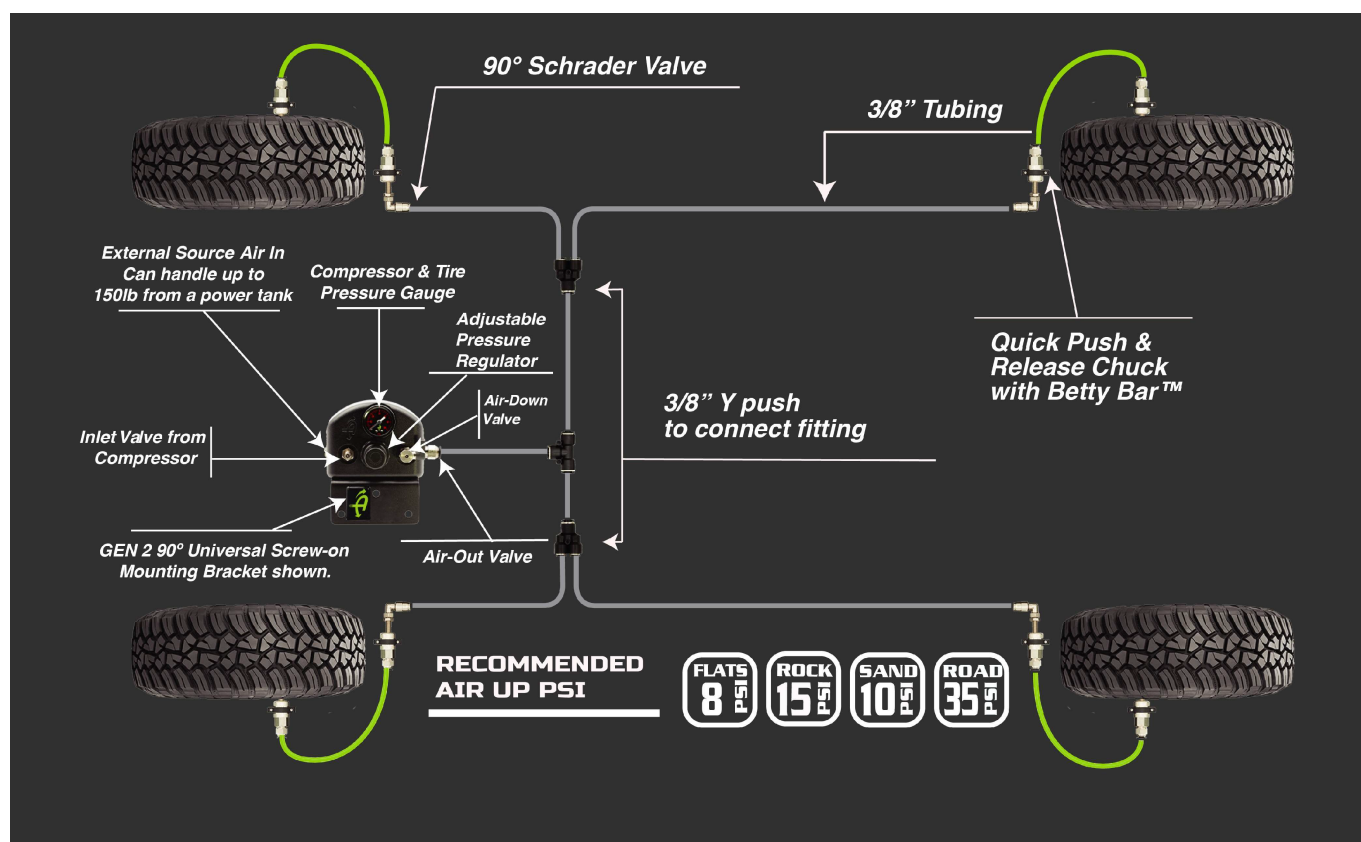


Figure 1

QUICK CONNECT CHUCKS COME PRE-ASSEMBLED SKIP TO NEXT PAGE

Using the Bill of Materials identify and lay out all your kit components confirming that you have all the correct parts and quantity.

For our first step we will assemble the Quick Disconnect Chucks for the tire whips. You will need 14mm wrench, 16mm wrench and thread sealer.

1. Apply thread sealer to the 01-109 and screw into 01-100 and stop when hand tight.
2. Once the hand tight continue to tighten for 2-3 full rotations using the wrenches. Repeat for all.
3. Insert the green air line into the each end of Quick Disconnect Chuck . Repeat for all.



01-109

01-100



* if chucks begin to leak upon connection, remove and switch end to allow the internal plunger to reset itself.

Our next step is to assemble all the air lines that install in your Jeep. We will start with the 3/8" air line assemblies. Gather all the 3/8" black air line, split loom, Body Mount Schrader Valves and "Y" connectors.

1. Put one 01-201 (Body Mount Schrader Valve) on one end of each air line.
2. Next pull each air line through each split loom.
3. Next insert one long and one short air line assembly into the "Y" connector and repeat. You should now have two "Y" assemblies.



Gather all the 3/8" black air line, split loom, and the "T" connector.

1. Pull each air line through each split loom.
2. Install the 62" and 28" air line into the "T" connector making one long piece
3. Install the 17" air line in the perpendicular port of the "T" connector.



Rear Schrader location— This is where we will be mounting the rear brackets to mount the Schrader valves on the body of the Jeep. ***We have included a little extra length of airline depending on your routing passage.**



Starting on the driver's side **REAR** wheel well, locate the 3 black screws and remove them. Save these as you will need to reuse them. Install the rear bracket with Schrader valve facing towards the front using the 3 black screws you saved. Position the Schrader in the hole and affix the nut as pictured.



Front Schrader location— Starting on the driver's side wheel well locate the front brake line bracket affixed to the frame. Remove the bolt only and leave the O.E bracket alone. Attach the supplied front bracket with the rectangular portion on top of the brake line bracket and re-insert the bolt. Before fully tightening be sure the semi-circle is facing towards the front as in the image.



Air line assembly

The air lines that you pre-assembled are in four sections:

- (2) 3/8" Front to Rear "Y" sections with Schrader valves attached (144")
- (1) 3/8" Firewall Cross-over with 3/8" "Tee" attached (85"+ 28")
- (1) Cross-over "T" to ADS Control Unit (18")

First, lay in the **3/8" firewall cross-over section**. You will run the tubing under the factory clips along the firewall of the jeep, also use supplied cable clips. Place the "T" connector on the passenger side behind the fuse box. Continue to run your other 3/8" tubing from the other open port behind the fuse box to the inside of the fender where it will be connected to the "Y" connector for the 3/8" tube. You can run the driver side 3/8 tube to the driver side inner fender as well.




First select one of the **3/8" Front to Rear "Y" sections with Schrader valves** and go to the front passenger side and lay the "Y" fitting towards the front of your Jeep. Pull the 3/8" firewall cross-over tube down from the inner fender until it is visible and accessible to the "Y" and connect.



You can repeat this process on the driver side. Once all fittings connected you can now pull up the slack and secure with cable ties. We will now run the 3/8 line down the passenger and driver side of the jeep.




We suggest running tubing through the body on the underside of the jeep like seen in pictures, but as long as they are placed in a safe route away from damage, installer may choose any location. Now attach the 3/8 line into the Schrader's placed in the wheel well.

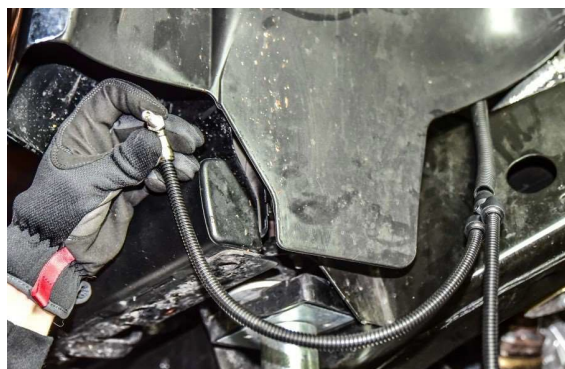

Once all airlines are ran through the jeep you can go back and secure any loose lines with zip ties, be sure to keep the air lines away from exhaust or any moving parts of the vehicle.



You will now go back to your engine compartment and connect your final piece of 3/8" tubing into the remaining port on the "T" connector and then let sit until we mount the ADS controller.

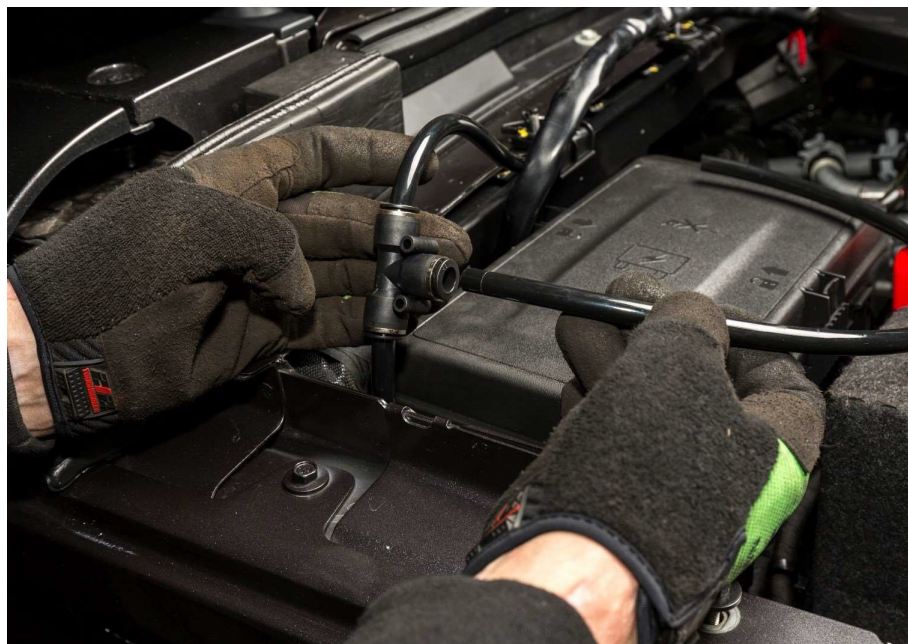

Now we will install the ADS Controller into the engine bay. This is a simple bolt-in operation. You will need a 10mm wrench or socket.

Remove the rear most fender bolts on the passenger side near the battery using a 10mm




You can now place the ADS controller in that spot and fasten using the factory fender bolts. attach the remaining 3/8 tubing into the push connect on the right hand side of the controller.



90° swivel for direct air source is either preinstalled or requires a 9/16" wrench for installation



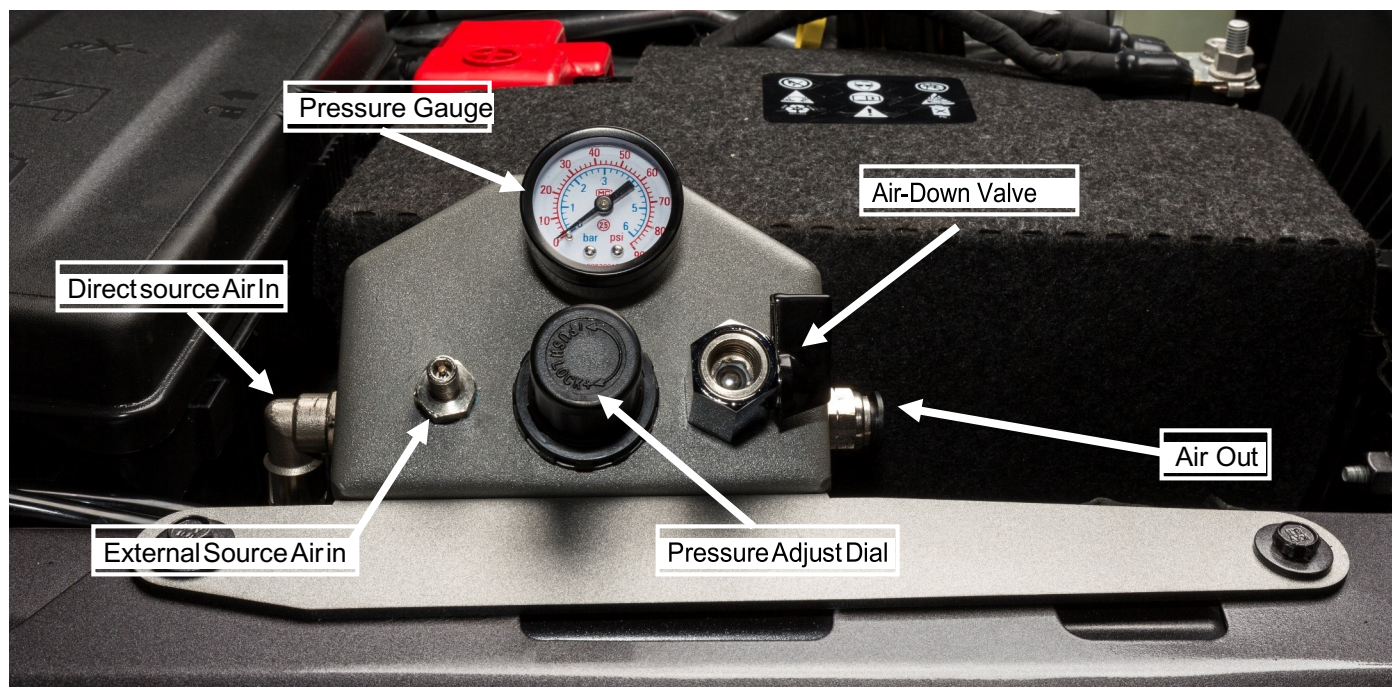


Congratulations you have now completed the install of your new Air It Up® 4 Tire on Board ADS System.

Please perform the following pressure tests.


1. Pressurize your system with no whips connected to ensure all Schrader's are sealed and everything is working properly (release pressure on each valve to make sure all flowing equal)
 2. Connect all your tire whips to the Body Mounted Schrader valves and the tires. Note the tire pressure on the ADS Controller gauge.
 3. Listen and Inspect all connections for leaks.
 4. If you think you have a leak spray mild soapy water at the fitting and look for bubbles.
 5. If you find a leak. Please refer to our trouble shooting section.
- (Take a few minutes to try different settings and get familiar with the system)

LEAK INSPECTION

To inspect for leaks pressurize your system, take a spray bottle with a solution of mild soap and water and spray suspected area. If you are not sure where the leak is coming from take a systematic approach spraying one area at a time.

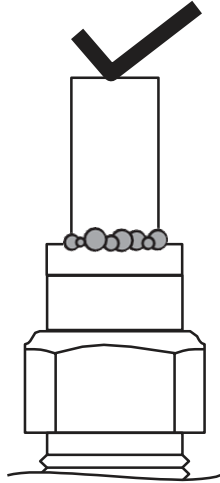

SMALL SOAP BUBBLES THAT
DO NOT EXPAND

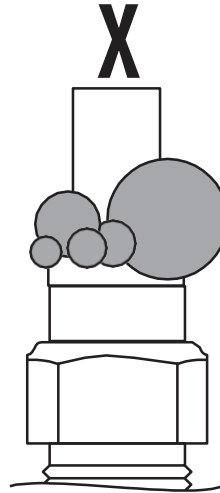


SOAP BUBBLES THAT EXPAND

LEAK CORRECTION


Most leaks will be in one of these three areas and the correction is listed below. If this does not correct your problem or you need further assistance please call **833-226-4863, option 4** and one of our technical staff will assist you.

LEAK AT AIR LINE
TUBE AND AIR FITTING

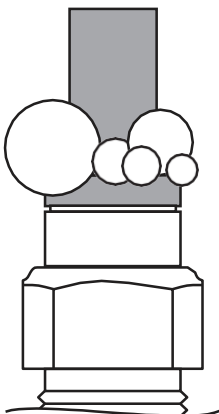


Release Air Line Tube.
Review proper cuts
and procedures.

LEAK AT BASE OF AIR FIT-
TING ON AIR SPRING

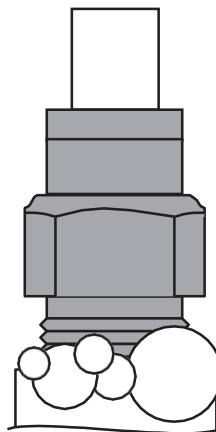


Tighten Air Fitting one
turn or until leak stops.

LEAK OUT OF THE VALVE CORE
ON INFLATION VALVE

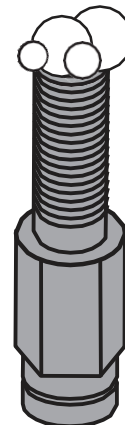


Tighten valve core with
valve core wrench on In-
flation Valve Cap.

When plumbing a direct air source to the ADS controller you have 2 options. The first option is to use the front external source Schrader port.

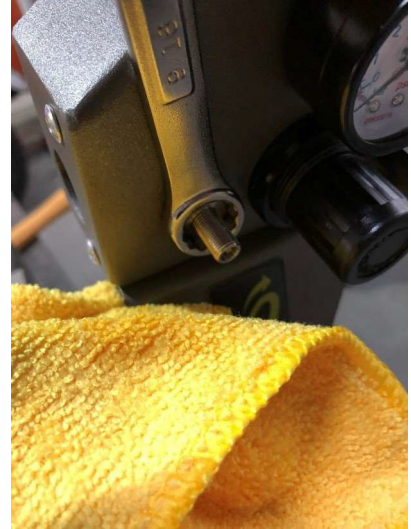

To remove the Air-Port Schrader use a 9/16 wrench or socket, spray penetrating oil, wait 5 min and remove slowly. After removed be sure the threads are clean and no adhesive residue is left over.

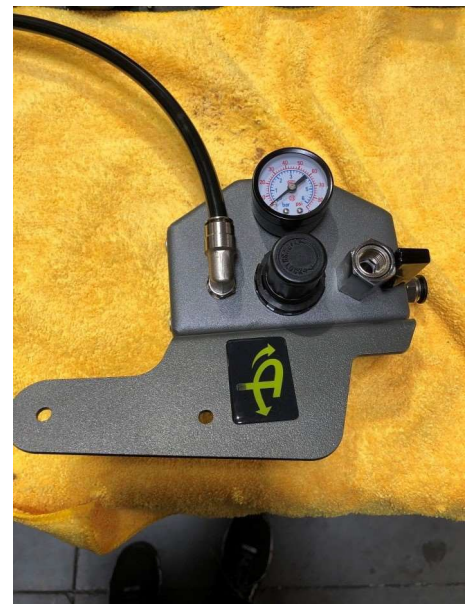

Add pipe sealant to the threads and install the 90 degree 3/8 swivel using the 9/16 wrench until tight. Connect your high temp hose to the compressor and you're done.



SIDE PORT 90 DEGREE FITTING INSTALL (requires special socket)

The second option is the 3/8 hex plug located on the left side of the ADS controller.



Apply penetrating oil to the 3/8 hex plug threads and insert 1/4 Allen key completely. Slowly remove the plug and make sure not to damage or strip. (you can also use a heat gun to make plug removal easier)



When plug is removed make sure to clean threads and remove all glue residue. You will now apply Teflon tape or thread sealer to your 90 degree swivel and install using our special socket



Congratulations!

You have now completed the install of your new ARB Compressor and/or ADS System.

WARNING: YOUR REGULATOR HAS NOT BEEN PRESET FROM THE FACTORY, AND MUST BE SET AFTER INSTALLATION.

How To Use Your UP Down Air® Air Delivery System.

Airing down your tire pressure.

While the vehicle is parked and in a safe place, connect all 4 quick connect hoses to your tire valve stems and to the installed 90° Schrader valves.

In the engine bay, go to the controller box. On the right-side controller box is the release valve lever. Open the release valve and now you're airing down all 4 of your tires at the same time. Close the valve and it will now read your current tire's air pressure. *It's That Simple!*

**The first time you air down your tires, keep track how long it takes so you are able to set a timer next time you air down your tires.*

Checking and Setting your Tire & regulator pressures or airing up your tires.

This is how the system works for airing up:

Our ADS System uses a simple dial type pressure regulator that can be adjusted to allow more or less air in the system by turning the black regulator knob *clockwise* to release the air or *counter-clockwise* to reduce the air pressure.

With your green Quick Connect hoses completely removed, turn the compressor on, and within 10 seconds the compressor should come to a stop or turn on & off. The pressure gauge needle will show the pressure from the compressor. This is how you dial the regulator in to set your desired Tire Pressure. You should now push the knob down to set it.

In order to fill all 4 of your tires you will need to tightly connect all 4 quick connect hoses to your tires valve stems and to our special 90° Schrader valves stems. To insure there are no leaks, please rotate the chucks a quarter turn clockwise to create a tight seal to the valve stems.



Now after connecting all 4 of the quick connect hoses to the valve stems and the Schrader valves, the gaugedial needle will now reading the pressure from all 4 of the tires. At this time, you may start your engine and turn the compressor on.

While your compressor is connected and turned on, along with your vehicle being started, start turning the dial *clockwise* to allow **higher** PSI. Turn the dial *counterclockwise* to **lower** the PSI.

When the compressor pulsates or turns on and off, and you are not at your set tire pressure, then immediately turn black knob clock-wise to allow air to escape into the regulator lower chamber. This will re-activate the ARB compressor, and as you turn the dial, you will notice the compressor speeding up.

If your tires are at the desired pressure, you may now turn your compressor off and safely store your hoses with the convenient storage bag provided.

Do Not let the compressor cycle on and off, as this means your ARB compressor is not supplying any more airflow, so the compressor is not producing any further air at this time and should be turned off immediately to avoid blowing fuses. If your ARB compressor blows a fuse or suggestion is to go to an auto parts store and buy a name-brand 50 AMP fuse as the ARB seems to be equipped with a lesser quality fuse.

We sure hope you enjoy your system our goal is to offer a trouble-free easy to use products.



Air It Up!



UP DOWNAIR'S NO FINE PRINT 12 MONTH WARRANTY

Our unique warranty proves our commitment to the quality and reliability of every UpDownAir® product.

No Fine Print Warranty: If you are the original purchaser of any UpDownAir® product and it breaks, we will replace it.

UpDownAir's obligation under all warranties is limited to the repair or replacement, at UpDownAir's option, of the defective material. Any cost of removal, installation or reinstallation, freight charges, incidental or consequential damages are expressly excluded from these warranties. Up Down Air Systems, LLC reserves the right to make future revisions to this product and Product Warranty without prior notice or obligation to upgrade your product.

Please read all instructions carefully prior to beginning installation of your Up Down Air Systems, LLC. product.

PLEASE CONTACT US DIRECTLY FOR ALL WARRANTY ISSUES AT:
Toll Free: 883-226-4863 Email: info@UpDownAir.com