




## Nomadic 180° LTE Awning

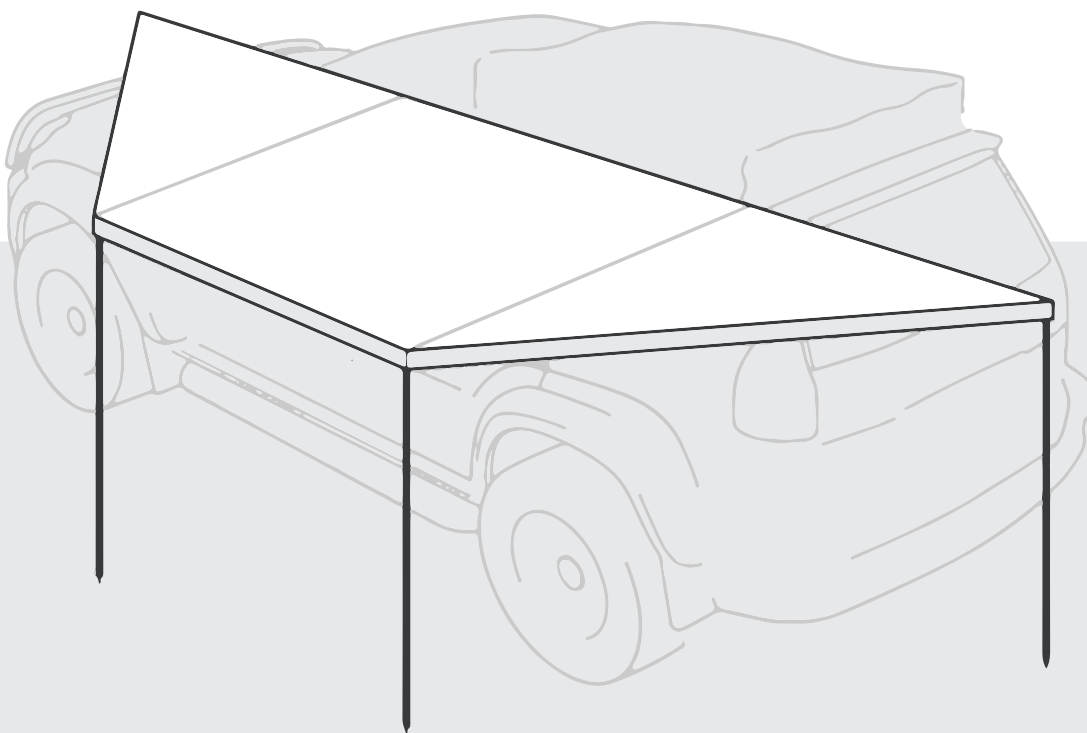

**CAREFULLY READ INSTRUCTIONS  
PRIOR THE FIRST USE OF THE 180°  
LTE AWNING**

# Nomadic 180° LTE Awning

## SET-UP & CARE INSTRUCTIONS

### GET TO KNOW YOUR AWNING

We recommend you check all parts are included prior to first use.

1 180° LTE Awning  
8 M8 mounting bolts and nuts  
2 Mounting bracket

2 Tension straps  
7 Pegs  
7 Guy ropes


**Tools needed**  
1 13mm Wrench

### ATTACHING BRACKET TO ROOF-RACK

1

180° awning brackets have been designed to fit most common roof rack configurations. However, with the ever increasing numbers of roof rack designs available, it is difficult to supply a mounting bracket to accommodate every case. Below are examples of how to mount the Awning brackets to Flat style and Basket style roof racks. The bracket can also be mounted on roof bars, however, additional specific attachments may need to be sourced from your roof rack supplier.

**If in doubt, please visit your roof rack specialist for specific roof rack mounting options and advise on Load capacities**

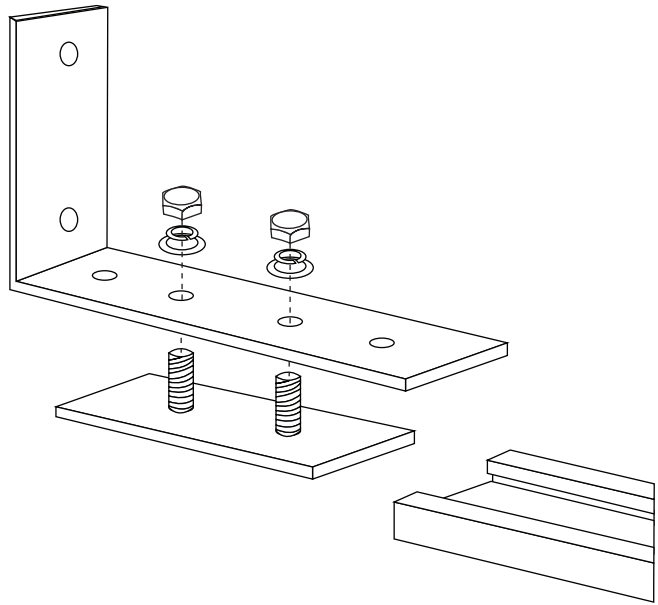

### ATTACH AWNING TO BRACKET

We recommend using an experienced after-market 4x4 Accessories fitter to mount the Awning to your vehicle. Fasteners and fixing connections should be checked regularly on both the awning and roof rack to ensure the awning is always mounted securely to your vehicle roof rack.




**PROLONGED TRAVELING ON UNEVEN ROUGH OR CORRUGATED TERRAIN WILL REQUIRE MORE FREQUENT INSPECTIONS.**

2

Insert supplied M8 bolts into grooves in aluminum backing plate.

Then use the supplied washer, lock washer, and lock nut to secure the bracket to the awning aluminum backing plate.

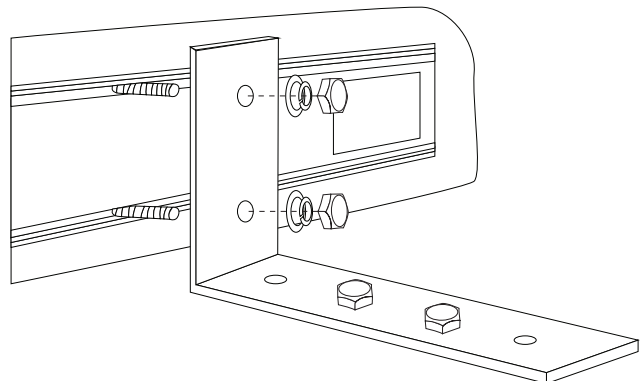

# Nomadic 180° LTE Awning


## SET-UP & CARE INSTRUCTIONS

### SET-UP


3

#### REMOVE COVER


Unzip cover and fold it over the awning body

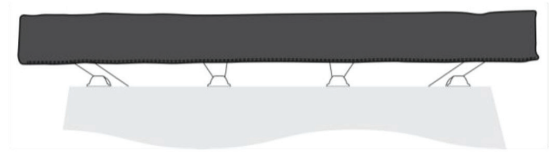

1

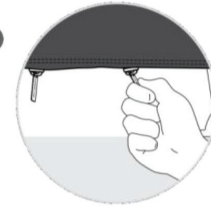

2

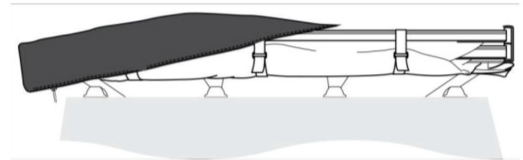


4


#### RELEASE AWNING

Release the three Velcro straps and allow canvas to drape

1

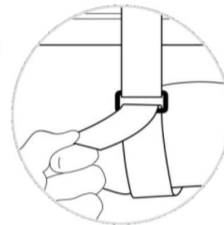

2

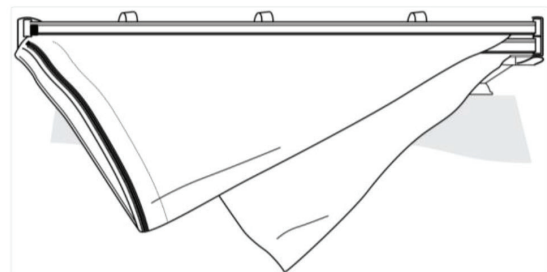

# Nomadic 180° LTE Awning

## SET-UP & CARE INSTRUCTIONS

### SET-UP



5

#### OPENING


To begin setting up the awning follow steps 1 to 4

#### TIP


**AWNING WILL  
SELF—SUPPORT  
DURING SET UP ONLY  
HOWEVER IT IS NOT ADVISIBLE TO  
LEAVE AWNING HANGING FOR  
ANY LONG PERIOD OF TIME.**

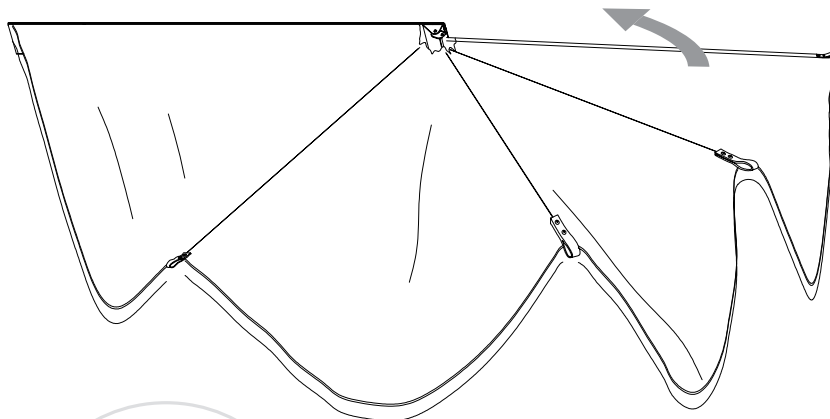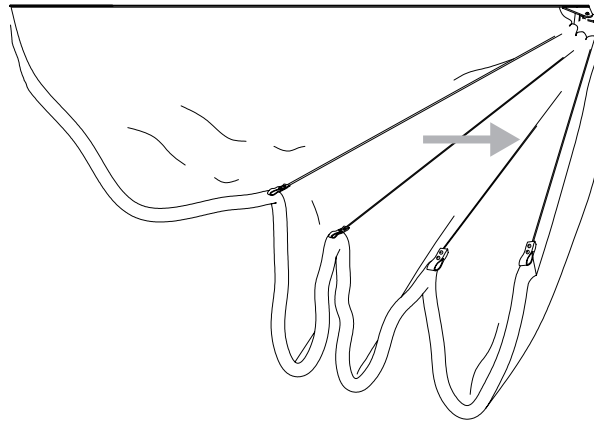

Attach arms  
to roof rack

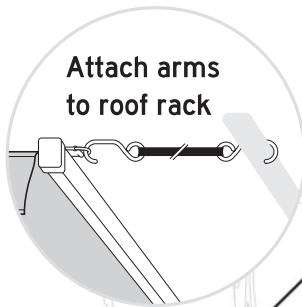

Swing out left arm fully and  
attach to roof rack using  
supplied tension strap

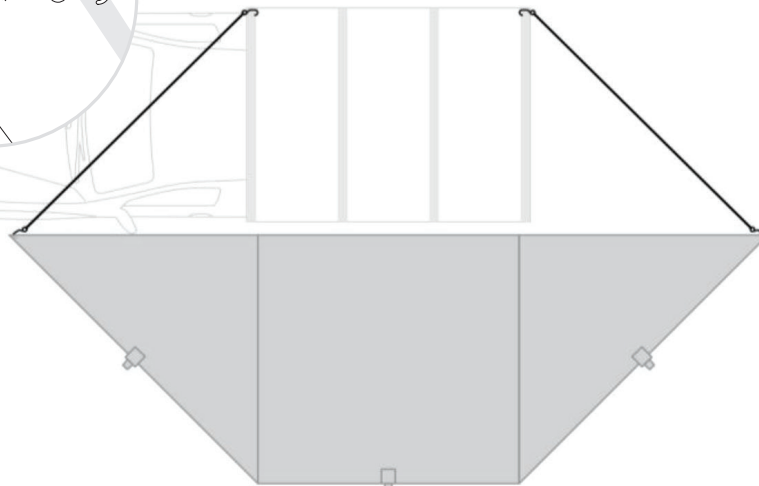

# Nomadic 180° LTE Awning


SET-UP & CARE INSTRUCTIONS

## SET-UP

6

### POLE SET-UP

- Undo the Velcro straps securing each support leg. Leg will pivot down to a vertical position. Adjust to desired height by unlocking and locking the internal twist locking mechanism.
- Attach individual support legs to the remaining rafters by inserting into holes at the end of each rafter.
- Secure the end of each rafter by anchoring and tensioning guy ropes.

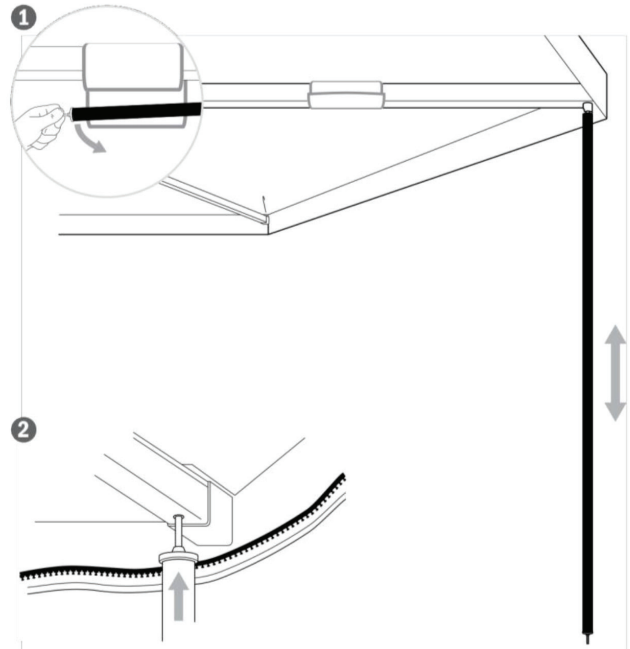

**ENSURE ALL GUIDE ROPES ARE SECURED**




**IF ATTACHING OPTIONAL WALLS, EACH RAFTER MUST BE SUPPORTED BY A POLE.**

#### TIP

**IN CASE OF RAIN, LOWER THE SUPPORT LEGS TO ALLOW**

**DOWNWARD SLOPE AND GUY OFF BETWEEN RAFTERS TO FORM VALLEYS FOR WATER RUN—OFF**

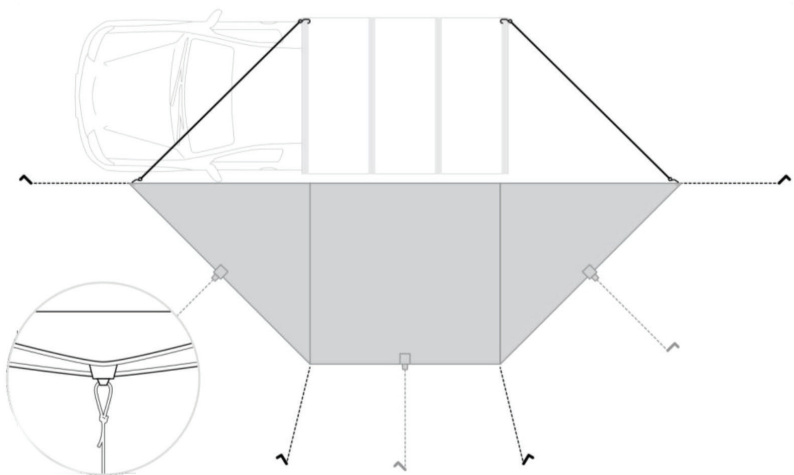





# Nomadic 180° LTE Awning

## SET-UP & CARE INSTRUCTIONS

7

### PACK-DOWN

- Undo all pegs / guy ropes
- Fold away legs and stow away using attached Velcro straps
- Release front and rear tension strap.
- Fold the RHS of awning back 90° from the awning body ensuring the top rafters sit directly on top of the bottom rafters.
- Fold the LHS of awning back 90° from the awning body ensuring the top rafters sit directly on top of the bottom rafters.
- Roll canvas and secure using Velcro straps.
- Position PVC bag over awning and zip up to complete pack down.

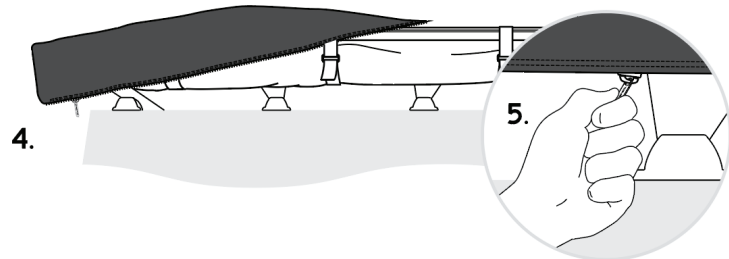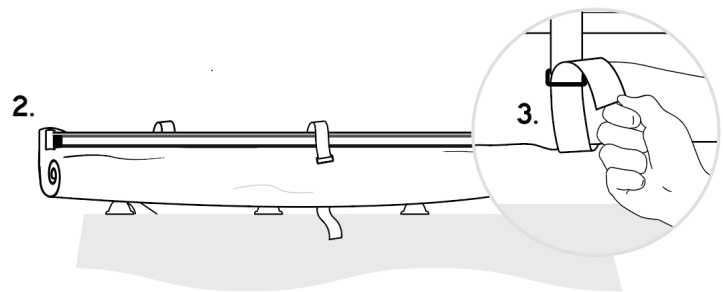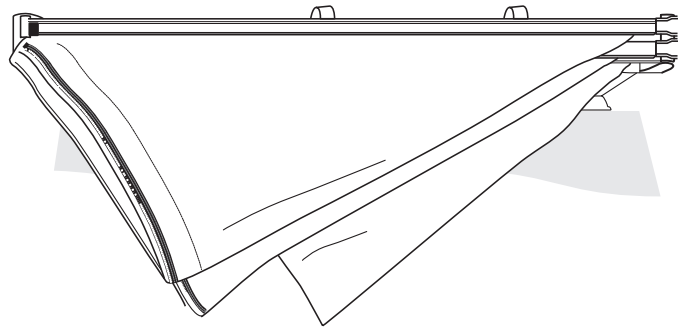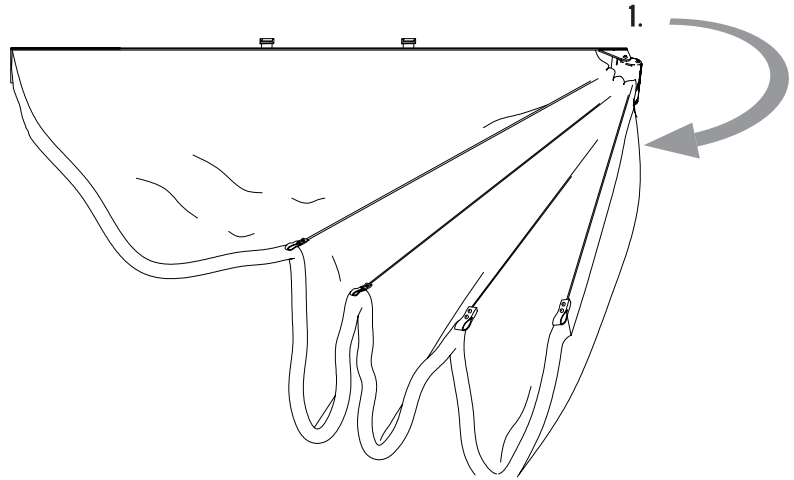

**DO NOT STOW THE CANVAS CARRY BAG CONTAINING THE ADDITIONAL LEGS INSIDE THE AWNING'S TRANSIT COVER.**

# Nomadic 180° LTE Awning

## SET-UP & CARE INSTRUCTIONS

### CLEANING

Clean with cold water and a soft bristle brush. Do not use soaps and detergents. Do not expose to petrol, diesel, oils or chemicals of any nature.

### STORING

Correct storage is vital for the longevity of your Nomadic 180° LTE awning. If on occasion the awning is required to be stowed wet, it is essential it is unpacked and dried as soon as possible. Rot, mildew damage and incorrect storage is not covered under warranty.

### STRUCTURAL INTEGRITY

The 180° LTE awning has been designed for general camping use under normal conditions. Always ensure all guy ropes are anchored correctly. It may be necessary to re-adjust guy ropes and pegs at times to maintain the structural integrity of the awning.

### VEHICLE FITTING

We recommend using an experienced aftermarket 4x4 accessories fitter to mount the 180° LTE Awning to your vehicle. Fasteners and fixing connections should be checked regularly on both the awning and roof rack to ensure the awning is always mounted securely to your vehicle roof rack. Prolonged travelling on uneven rough or corrugated terrain will require more frequent inspections.

### FIXING THE OPTIONAL WALLS

The velcro awning walls will provide a sheltered / protected area around the awning. When attached to the awning, they are designed to create a shaded area and help reduce dust.



## WARNINGS

- THE 180° LTE AWNING HAS BEEN DESIGNED FOR GENERAL CAMPING USE UNDER NORMAL CONDITIONS. ALWAYS ENSURE ALL GUY ROPES ARE ANCHORED CORRECTLY. IT MAY BE NECESSARY TO RE-ADJUST GUY ROPES AND PEGS AT TIMES TO MAINTAIN THE STRUCTURAL INTEGRITY OF THE AWNING.
- TO AVOID CHANCES OF PERSONAL INJURY AND PROPERTY DAMAGE, WE HIGHLY RECOMMEND THE NOMADIC 180° LTE AWNING SHOULD NOT BE ERECTED DURING WINDY CONDITIONS.
- IN WINDY CONDITIONS IT IS HIGHLY RECOMMENDED NOT TO ERECT THE AWNING AND WALLS AS PERSONAL INJURY AND OR PROPERTY DAMAGE MAY OCCUR.
- DO NOT CUT OR MODIFY THE AWNING OR MOUNTING ACCESSORIES.
- DO NOT EXCEED THE VEHICLE MANUFACTURER'S WEIGHT LIMITS.
- DO NOT USE DAMAGED OR EXCESSIVELY WORN PRODUCTS. CONTACT US IF YOU ARE UNSURE.
- KEEP ALL FLAMES AND HEAT SOURCES AWAY FROM THE FABRIC
- UNDER NO CIRCUMSTANCES SHOULD ANY NAKED FLAME SOURCES BE USED NEAR THE AWNING, KEEP FIRES AWAY FROM THE AWNING
- KEEP A LOOK OUT FOR ANY AIRBORNE BURNING EMBERS THAT MAY COME IN CONTACT WITH THE TENT. KEEP A FIRE EXTINGUISHER OR BUCKET OF WATER NEAR BY.
- DO NOT OPERATE ANY DEVICES WHICH BURN FUEL INSIDE THE AWNING WHILE THE WALLS ARE ATTACHED.
- KEEP EXITS CLEAR
- REMAIN CAUTIOUS WHEN GUIDE ROPES ARE IN USE
- KEEP AN EYE OUT FOR CHILDREN WHEN AWNING IS IN USE
- STOW AWAY AWNING BEFORE OPERATING VEHICLE



## DO YOU NEED OUR HELP?



CUSTOMER SUPPORT 833-226-4863



SALES@OVERLANDVEHICLESYSTEMS.COM

WANT TO SHOW US YOUR RIG?  
CHECK OUT OUR SOCIAL!

@overlandvehiclesystems

