




Expedition - Truck Cap w/ Full Wing Doors, Front and Rear Windows & 3rd Brake Light



**CAREFULLY READ INSTRUCTIONS
PRIOR TO THE FIRST USE OF THE
EXPEDITION TRUCK CAP**

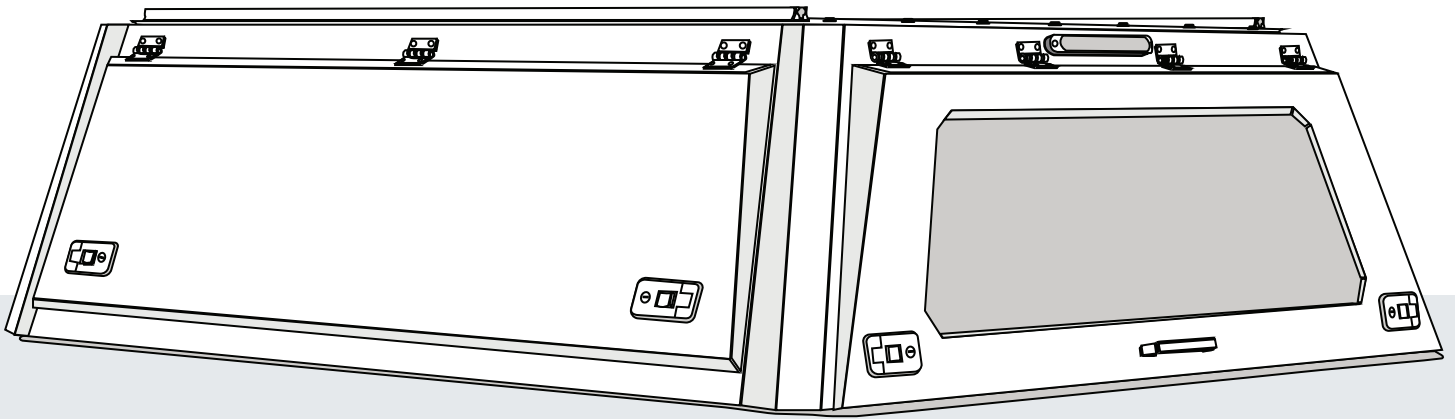

GET TO KNOW YOUR EXPEDITION TRUCK CAP

We recommend you check all parts are included prior to first use. Any Truck Cap manufactured from April 2024 to present, will not have a key-code outside the box and will need to follow these steps to install the rear latch mechanisms.

Notice for all customers, ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING.

Recommended Tools: 1x 10mm Socket/Wrench 1x 13mm Socket/Wrench 1x 4mm Allen Key 1x Microfiber Towel 1x Glass Cleaner		Bill of Material 2x Roof Rails 2x Side Panels 1x Front Panel 1x Rear Panel		2x 3M Bulb Seal 2x Butyl Tape 6x Brackets 1x Rear Lift Gate Handle	
CNP02 Panel Hardware 20x Hex Bolts 20x Hex Nuts 40x Flat Washers		CNP03 Roof Rail Hardware 14x Hex Bolts 14x Hex Nuts 14x Flat Washers 14x Black O-Rings		CNP04 Front/Rear Lid Hardware 14x Allen Bolt 14x Stainless Flat Washers 14x Black Flat Washers 14x Rubber Flat Washers 14x Hex Nuts	
CNP05 3rd Brake Light Hardware 3x Quick Splice 3x Heat Shrink Butt Connectors 1x Rubber Grommet		Brake Light Hardware 1x 1.5m Wiring 10x Zip Ties 8x Wire Guides		Latch Hardware 2x Latches 2x M8 Bolts	

1




Open Box 1 & 2, unpack all panels and open all hardware packs.

Recommended Assembly on floor.

Place Panels on a padded surface or shipping blanket to prevent damage (FIG 1).

Using Hardware CNP02, Begin assembly of forward most and right sided panel.

Align assembly holes and insert hardware loosely into each of the 5 holes connecting both panels (FIG 2).

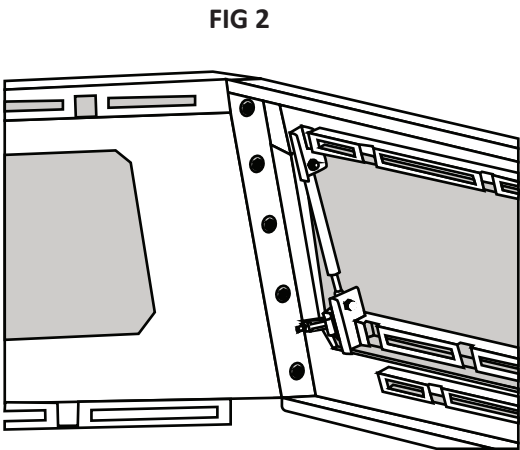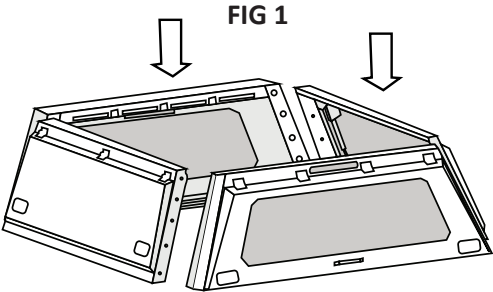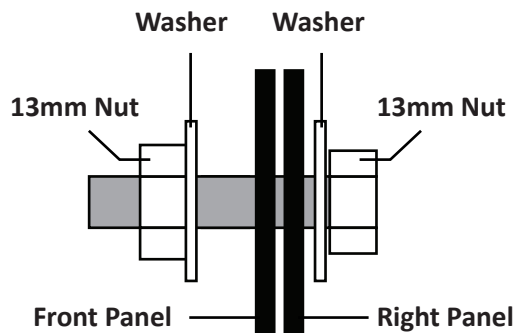



Expedition Truck Cap

SET-UP & CARE INSTRUCTIONS

Notice for all customers, ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING.





2

Repeat step 1 with left side panel

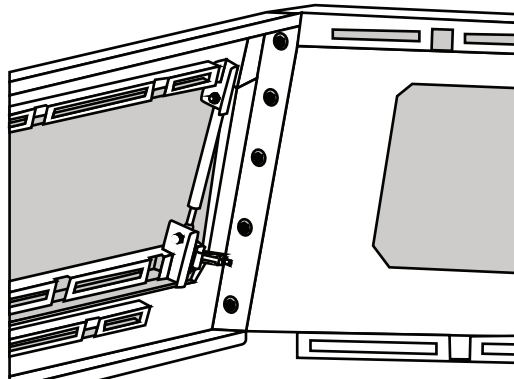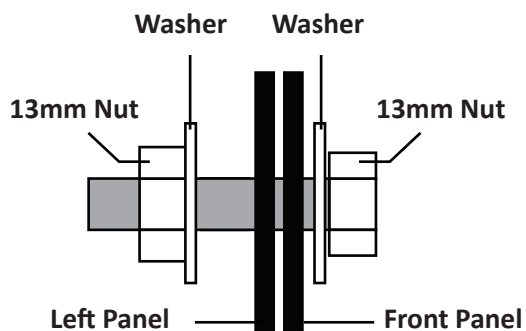

3

Align the rear panel and loosely assemble with supplied hardware

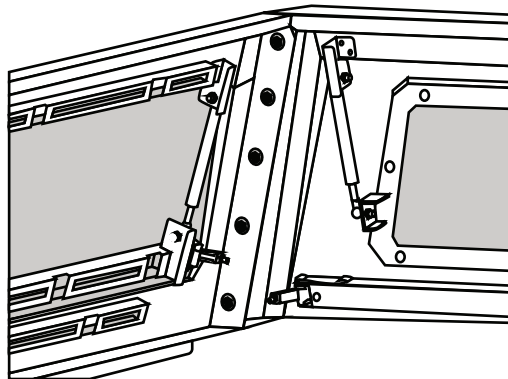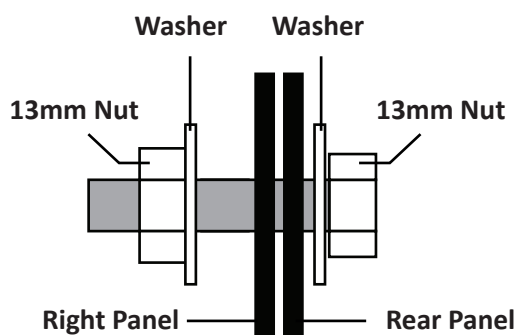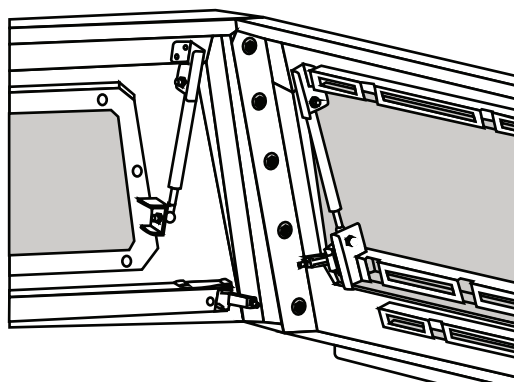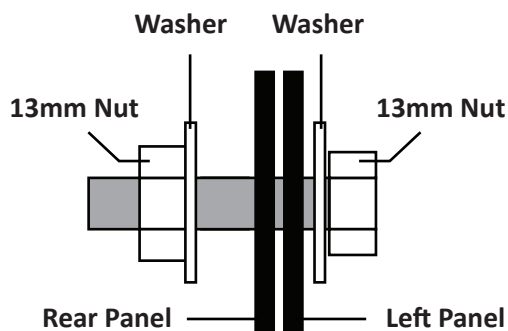

Once all panels are assembled, tighten all 20 bolts so the thread is flush with the end of the nut to help with the lid alignment.

Notice for all customers, ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING.

Expedition Truck Cap

SET-UP & CARE INSTRUCTIONS

4

Take top panel, place on cap.

Take the roof rails, place on top of that panel, aligning the holes.

Once roof rails are aligned and the top panel is aligned with all the holes, loosely insert bolts in each assembly hole.




Start with both sides, making sure not to over-tighten and deform lid.

Bolts should be tightened enough to compress the lid gasket and O-Ring Gasket.

Then proceed to the front and back.

Using Supplied hardware in CNP03

Note: We recommend this tightening sequence, making sure not to over-tighten and deform lid.

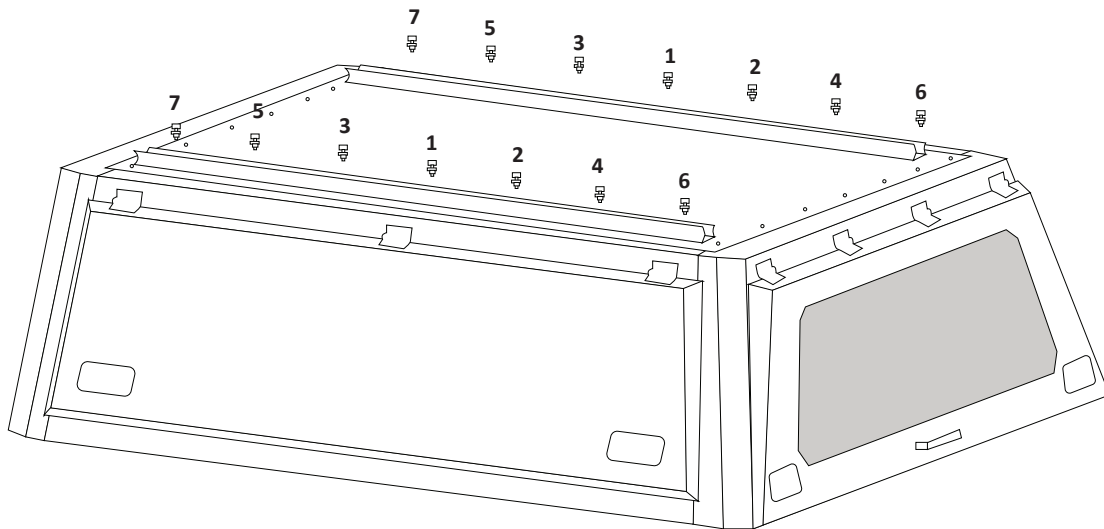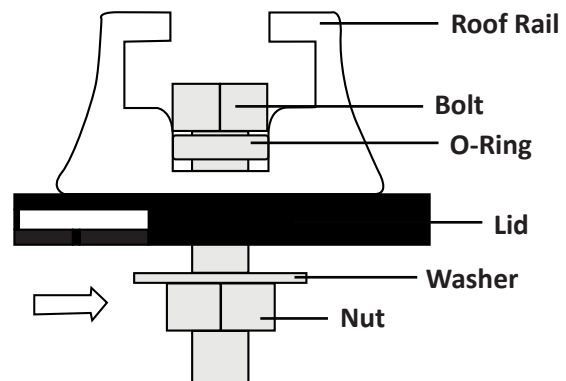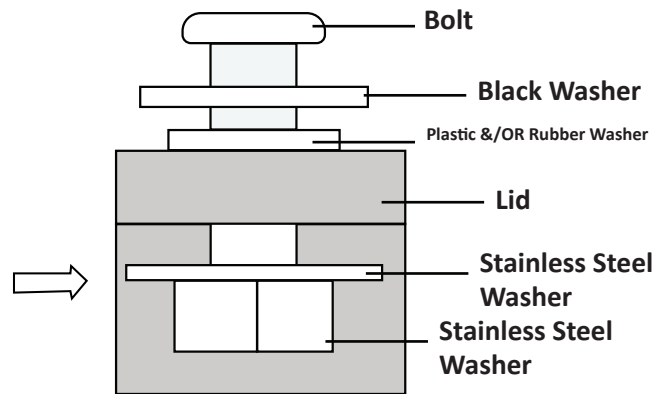


Expedition Truck Cap

SET-UP & CARE INSTRUCTIONS

Using hardware pack 4 (CNP04)






When tightening the lid, complete the front and rear portion.

Note: We recommend this tightening sequence, making sure not to over-tighten and deform lid.

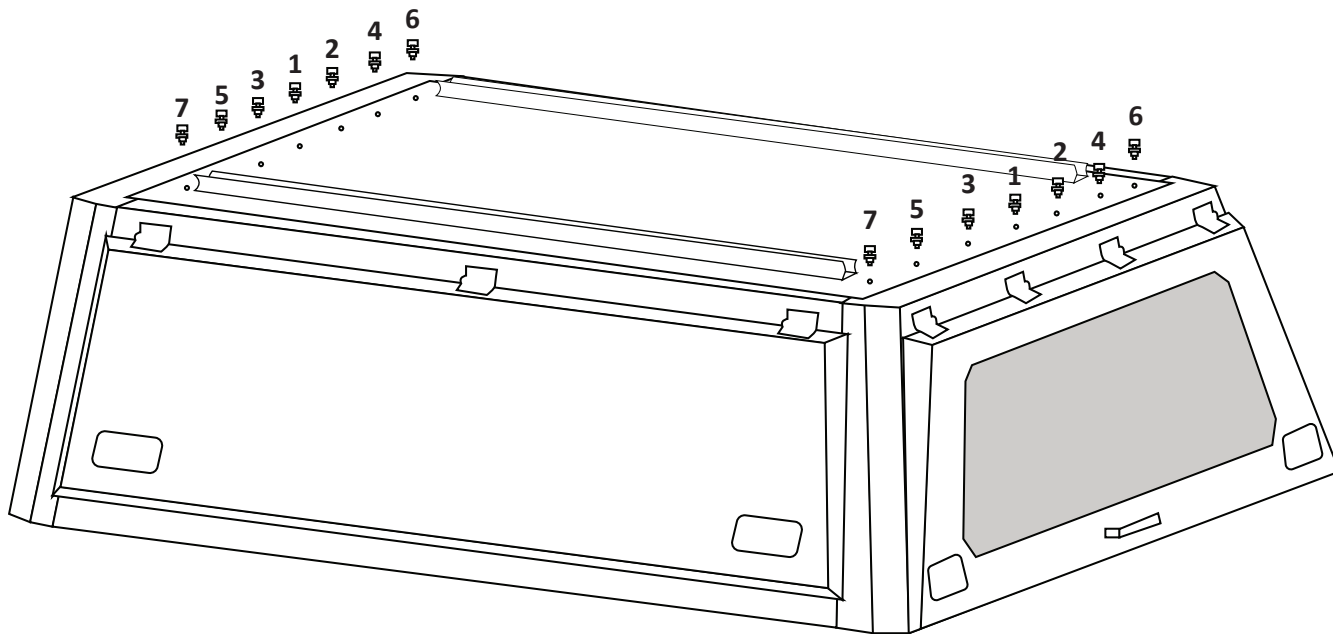

5

Once lid is tightened, tighten all panel assembly bolts.

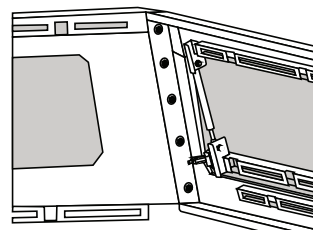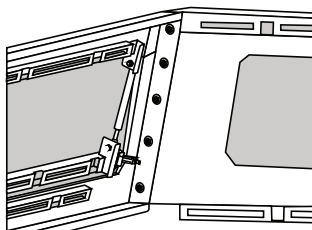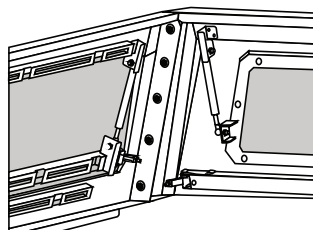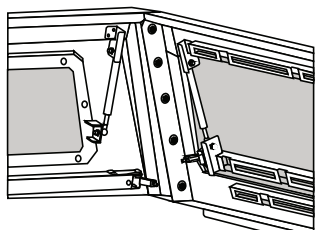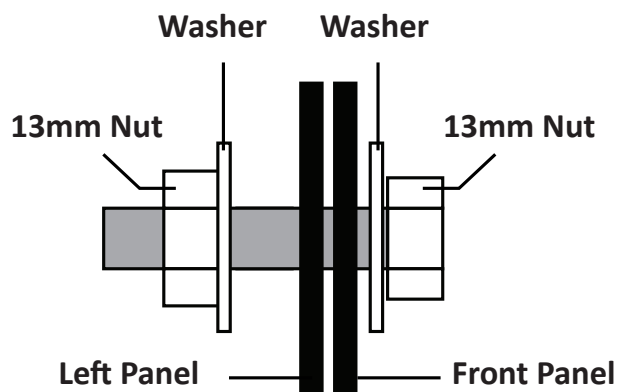

Expedition Truck Cap

SET-UP & CARE INSTRUCTIONS

HANDLE INSTALLATION


6

Unscrew pre-installed hardware off handle

From the inside, place screw, washer, and lock washer through panel holes.

Clear O-ring goes on outside of panel

Screw into pre-threaded handle.

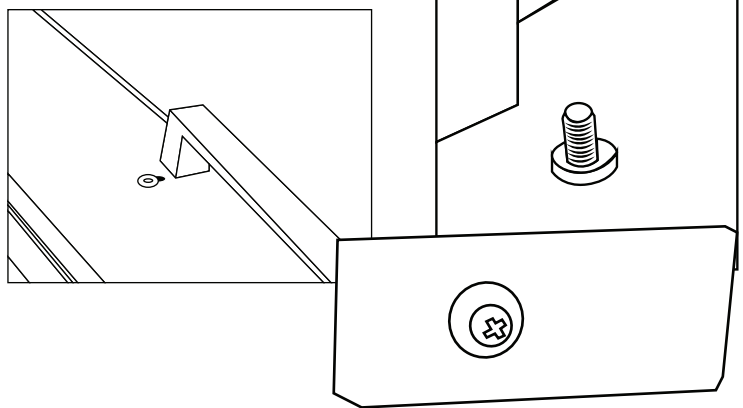

LATCH INSTALLATION


7

Install the latch cover onto the latch and apply the rubber perimeter onto the back of the latch cover.

Disregard the additional rubber piece

Take provided rear latch and place into latch slot

Once seated, screw in M8 Bolt with the washer.
Make sure latch is secure in latch slot.

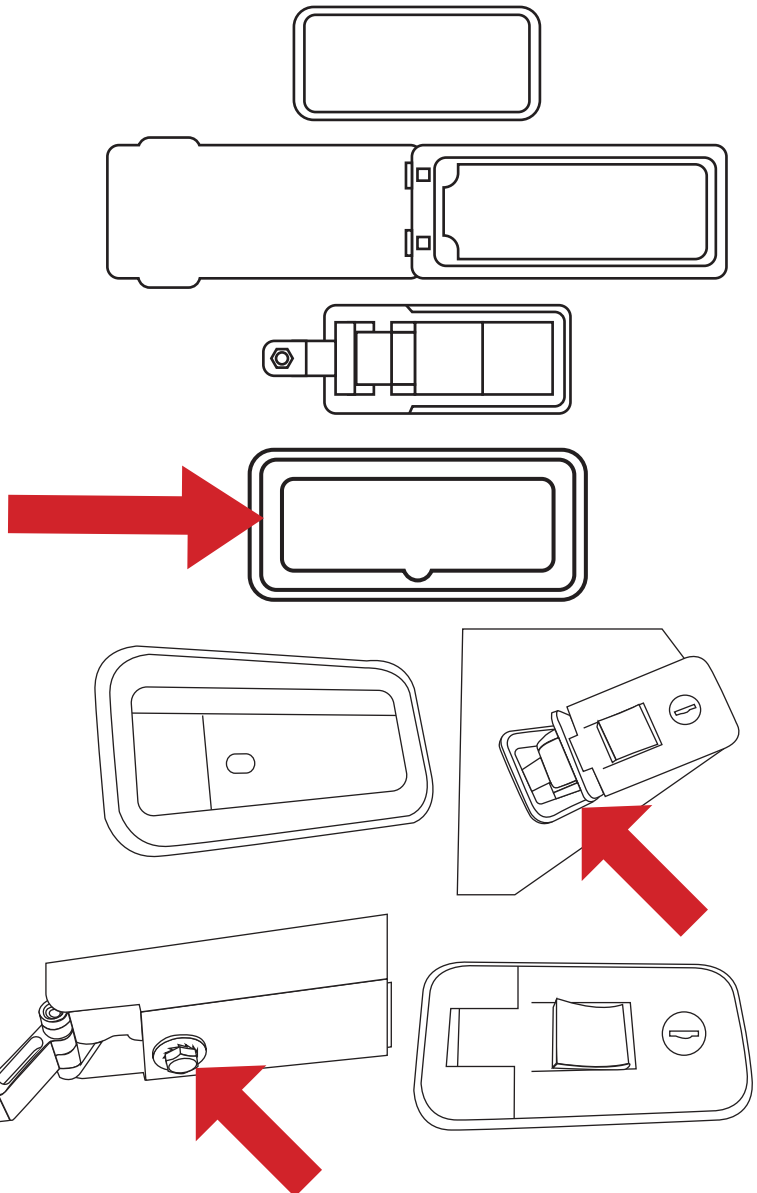


Expedition Truck Cap

SET-UP & CARE INSTRUCTIONS

You may need to adjust tension on the latch arm, if necessary.

To do this, Remove the rubber cap on M8 Long Bolt and tighten the lock nut on the latch arm.
Put the rubber cap back on once the lock nut is tightened.
Repeat on opposite side.

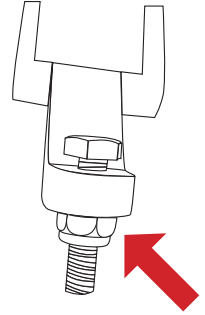

INSTALLATION ON VEHICLE

NOTE: Jeep Gladiators, equipped with the optional track system, may need to remove the front track rail in order to properly install and center the cap.


NOTE: Trim Levels w/ Spare Tire Mounts (Ram/Chevy) or other accessories that interfere with the Expedition Installation would need to be removed prior to installation.

8

With a cloth and warm water, Clean Bed Rails and Bulk head in preparation of 3M bulb seal

Carefully adhere 3M Bulb Seal to the center of the bed rail


*Note: If having issue with adhesion, use provided 94 primer

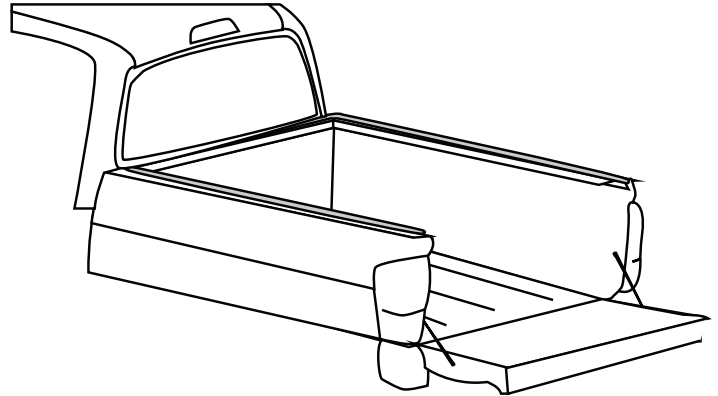

9

It is recommended to use the provided Butyl tape at the bulk head and bed rail seam.


This will aid in reducing potential water into bed.

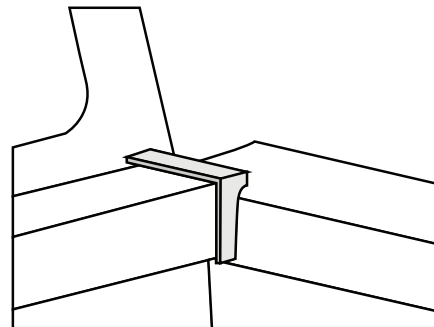

10

Set the Expedition Truck Cap on top of the vehicle.
Take time to set evenly in place to eliminate damaging the 3M gasket.

NOTE: It is recommended that 4 people to place cap on vehicle to avoid damaging the vehicle or the cover.

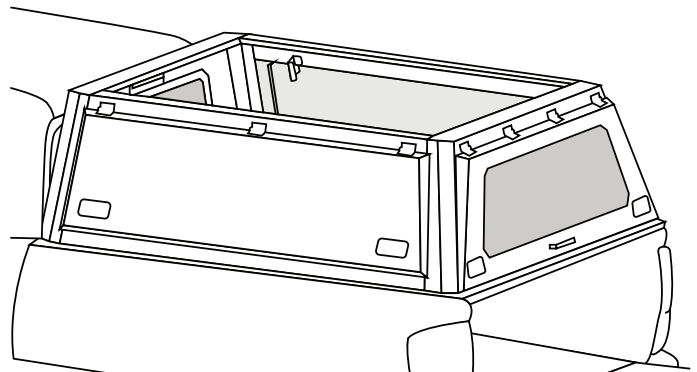

Expedition Truck Cap

SET-UP & CARE INSTRUCTIONS

11

Before clamping, ensure that rear hatch open and closes properly, if interference with the tailgate, further alignment may be required.



Ensure the cap is centered and not touching the cab

Install 3M Pad on the panel above the clamp locations prior to attaching the clamp to prevent scratching on Cap or vehicle.

Once cap is centered, front to back and left to right, secure Expedition Truck Cap on vehicle with provided 6 clamps.

***Note:** We recommend tightening the clamps by hand, once finished, tighten with wrench. Power tool NOT recommended.

***Note:** It is recommended to re-tighten all fasteners after the first 50 miles and every 500 miles thereafter.

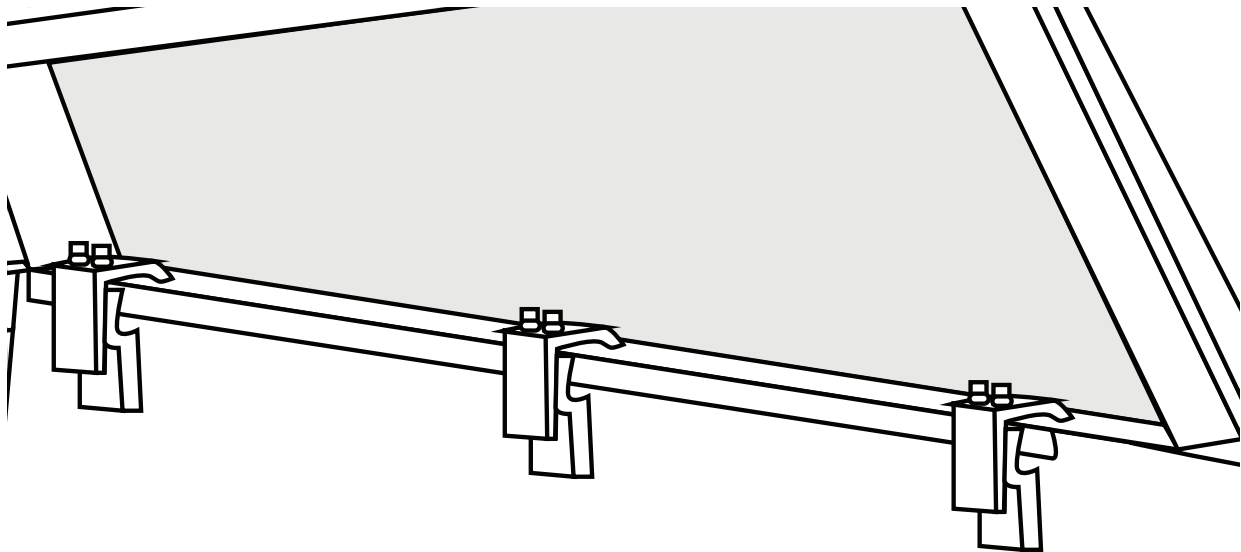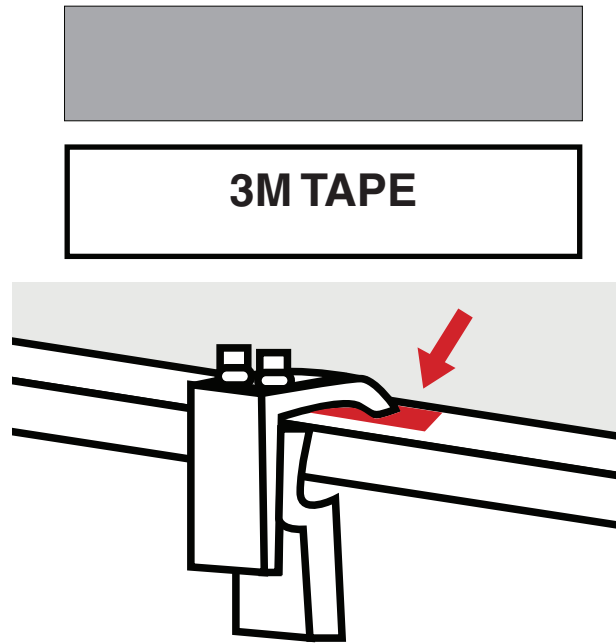


Expedition Truck Cap



SET-UP & CARE INSTRUCTIONS

12

Alternate between the 2 13mm bolts to ensure that the clamp is providing even pressure and bolts do not strip.

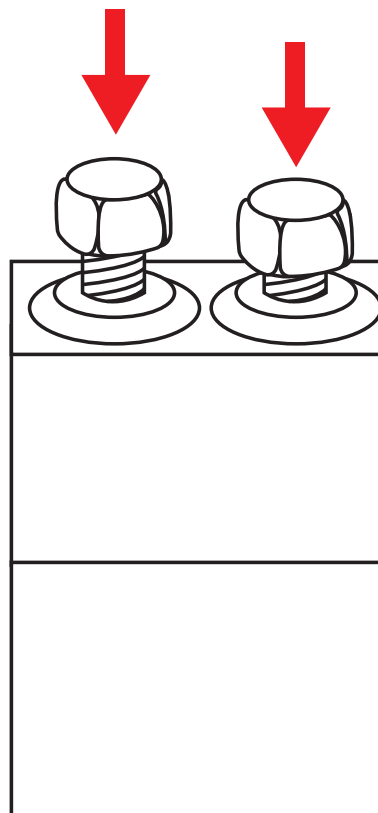

Make sure there is an overlap like the figure below

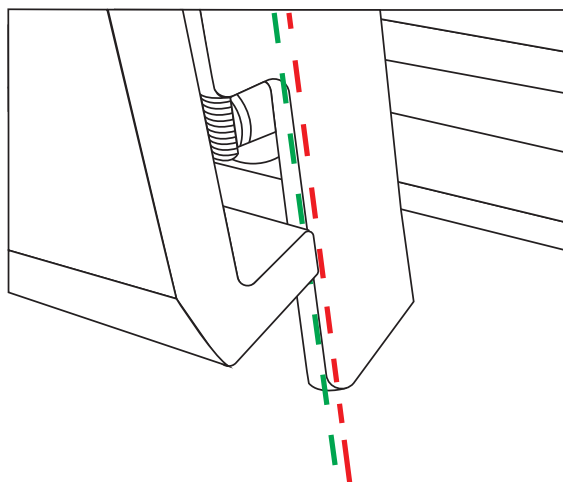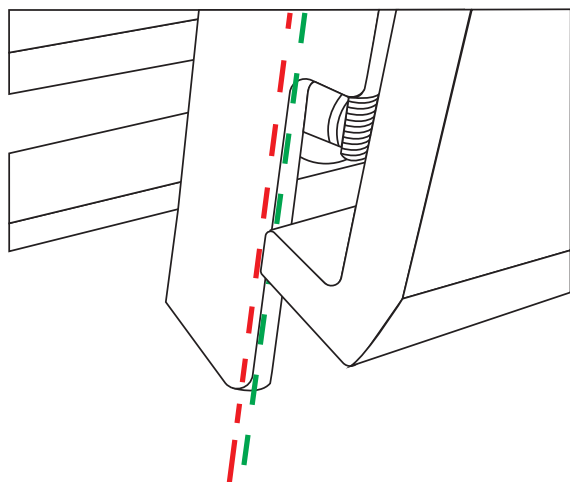

Note: Use a Torque Wrench (Ft-Lb) to tighten the clamping system down to your truck bed properly. You need at least 8-10ft-lbs of torque on the clamps to ensure they are secure to the bed. Any less and the cap may be in danger of moving or falling off when driving.


12

If your vehicle has the bed rail clamp portion, tighten the 6mm button head to rail before tightening down clamp to cap.



NOTE: Depending on your bed rail, adjustments may be needed to the height of the bolt nut and washer attachment to rail.

NOTE: Trucks with interior Bed Rails will use Female Clamp Portion with M8 Track Nut and Bolt (Tacoma, Select Gladiators, and Tundras)



NOTE: New clamps will be packaged with a spare nut bolt and washer. Only one is needed per clamp.

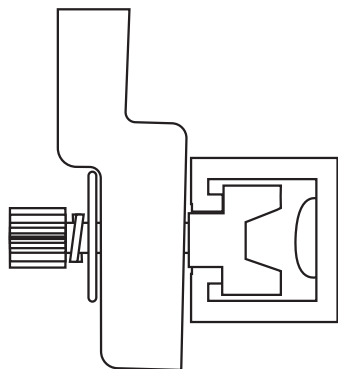

NOTE: Alternate between

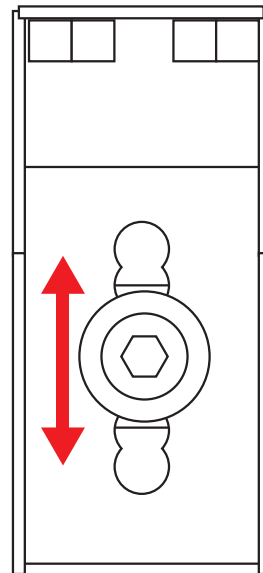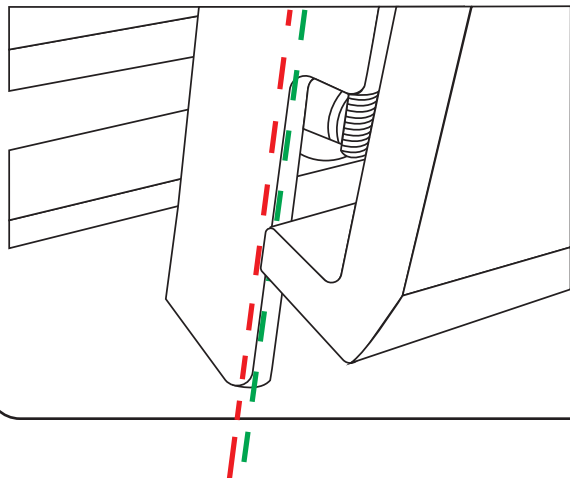

NOTE: Make sure there is spacing between interior cap lip and female clamp portion to prevent damage

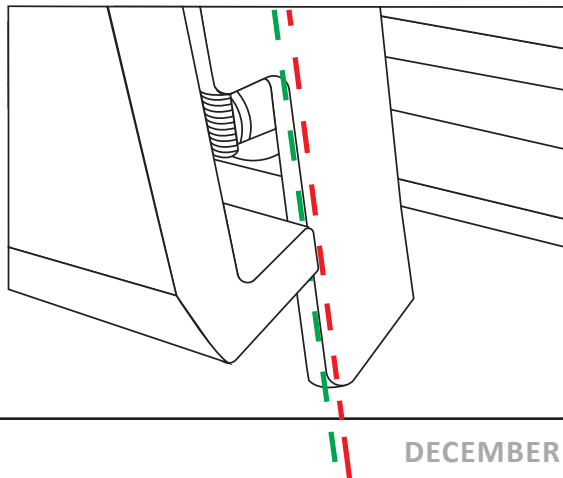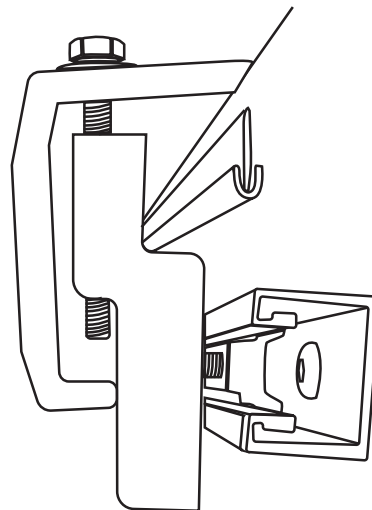

Expedition Truck Cap

SET-UP & CARE INSTRUCTIONS

GENERAL WIRING INSTRUCTIONS/ WARNINGS

The following vehicle specific instructions are intended as a general guide to help you wire a third brake light to your vehicle. Due to variations in vehicle manufacturers, models, and taillight configurations, the specific steps may vary. Always refer to your vehicle’s wiring schematic for precise guidance.

If your factory taillight wiring harness differs than then configuration shown, refer to the basic instructions.

Always heat shrink provided connectors and further insulate using electric tape and wire loom.

The following steps and provided components are a recommended method of connecting the third brake light. If you intended on removing the expedition cap frequently, a quick disconnect is recommended.

Important Notes:

- Always refer to your vehicle’s wiring schematic to help troubleshoot and properly tap into the factory lighting.
- It is highly recommended to have automotive electronics professional complete the installation to ensure the third brake light functions correctly. Talk to a wiring specialist before setting up the wiring portion.

Basic Instructions for Wiring a Third Brake Light

General Steps:

1. Remove the Factory Taillight:

- Follow the vehicle manufacturer’s recommended steps to remove the factory driver-side taillight.

2. Disconnect the Brake Light Wiring Harness:

- Disconnect the factory brake light wiring harness from the taillight.

3. Identify Wire Leads:

- Use a voltmeter to identify the wire leads for the brake and running light functions.

4. Connect the Wires:

- Once the correct leads are identified, use the provided easy splice connectors and/or ground eyelet to complete the wiring.
- Connect the provided harness to both the factory taillight leads and the new LED third brake light as outlined in the instructions.

5. Routing the Wiring Harness:

- It is recommended to use factory holes if available. An alternative is to drill a 3/8” hole near the taillight housing to allow the wiring to pass though.

PAGE NUMBER	APPLICATION
12-13	TOYOTA TACOMA 2016-2023
14-15	TOYOTA TUNDRA 2022-2025
16-17	TOYOTA TUNDRA 2007-2021
18-19	JEEP GLADIATOR 2020-2025
20-21	FORD F-150 2021-2025
22	FORD F-250/F-350 2017-2022
23	FORD F-250/F-350 2023-2025
24-25	FORD RANGER 2019-2023
26-27	GM 1500 2019-2025
28-29	GM COLORADO/CANYON 2015-2022
30-31	GM COLORADO/CANYON 2023-2025
32-33	RAM 1500 2019-2025
34-35	RAM 2500/3500 2009-2025
36-37	FORD MAVERICK 2022 - 2025
TBA	FORD RANGER 2024 - 2025
TBA	TOYOTA TACOMA 2024 - 2025

On the optional provided third brake light, the yellow wire is ground. The blue wire is for the tail light. The red wire is for the brake light.

NOTE: Dependant on vehicle application, when hooking up the blue wire (tail light), when the turn signal is applied, the third brake light will also act as a turn signal. If you still want the third brake light to function, do not set up the blue wiring portion.

WIRING CONFIGURATION - TOYOTA TACOMA 2016-2023

1

Disconnect the vehicle battery prior to any wiring.

***Note:** The following is the recommended method of wiring the third brake light/running light. If you intend on frequently removing the cap, wiring with a quick disconnect is recommended.

After removing driver side factory tail light, disconnect the 3 Bulbs completely removing the tail light.



Drill a 3/8" hole 3 Inches below the bolt on the driver side in the back of the truck bed to feed the Expedition wiring harness. Use the rubber grommet in the drilled hole to prevent the wiring from chafing.

***Note:** Splices will be used on the middle brake light.

Connect the wiring harness based on the color wiring diagram below

Use the 3 provided Quick Splices and Expedition Cap wiring harness


Provided quick splices are not insulated, it is recommended to cover connections with heat shrink tube and/or electrical tape

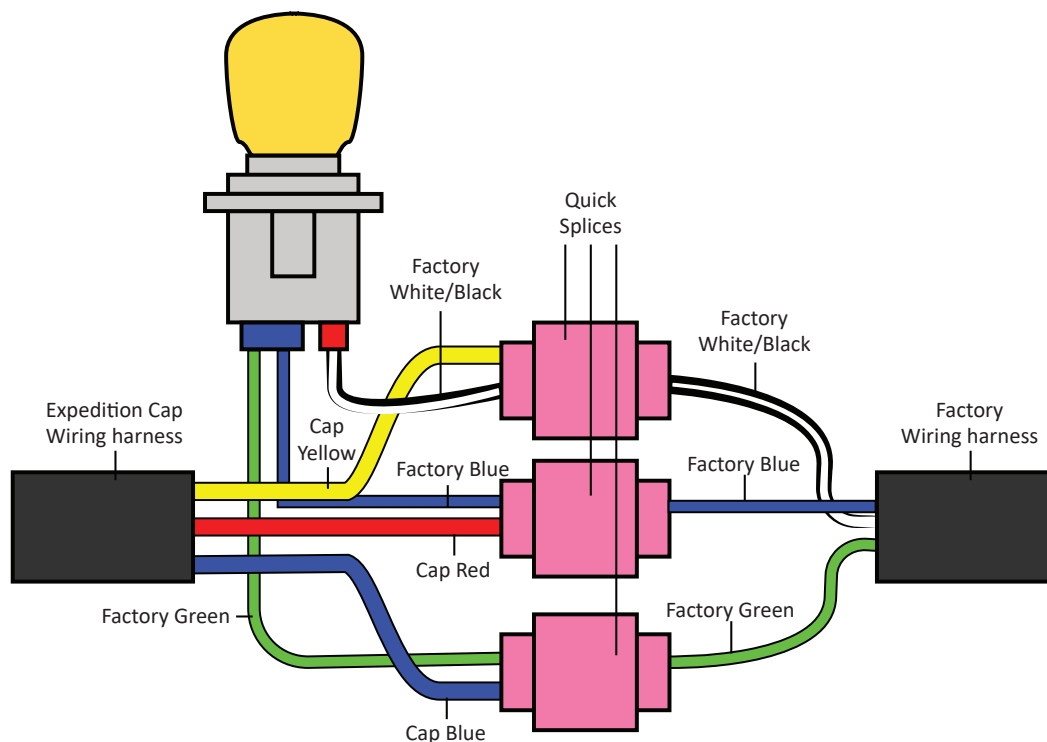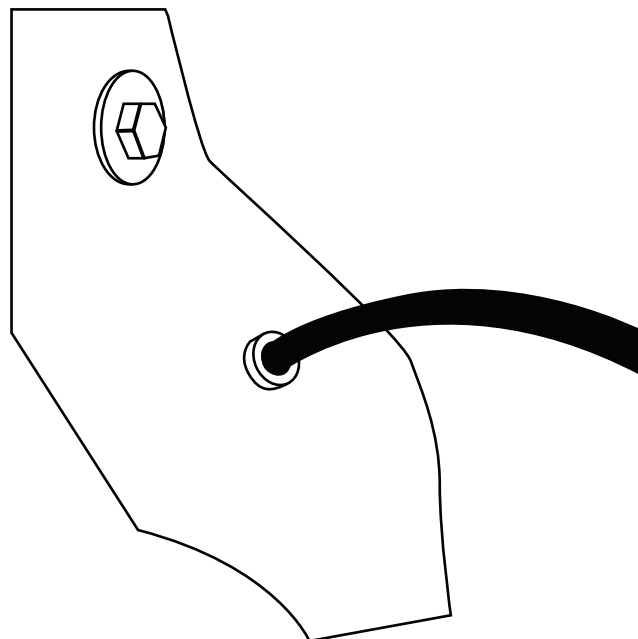


TOYOTA TACOMA 2016-2023 (CONT.)

2

Route the wiring harness through the pre-installed wiring guides to meet the 3rd brake light.

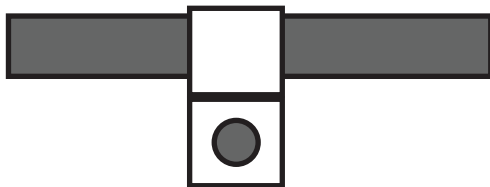

For extra cable management, use the adhesive clips to protect the wiring harness from being manipulated.

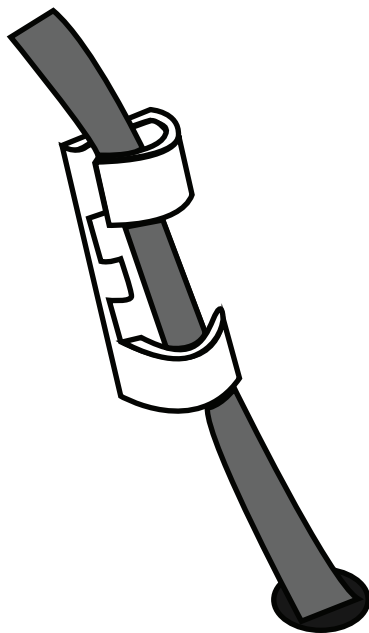

Using the 3 Butt connectors, connect the 3rd brake light wiring to the provided wiring harness
Using the diagram below

Once connections are made, use heat gun to heat shrink butt connectors. Once complete, cover wires and butt connector with electric tape.


For the wiring to the 3rd brake light,

Yellow Wire > White Wire

Red Wire > Red Wire

Blue Wire > Brown Wire

Reconnect battery when finished, test light for function.

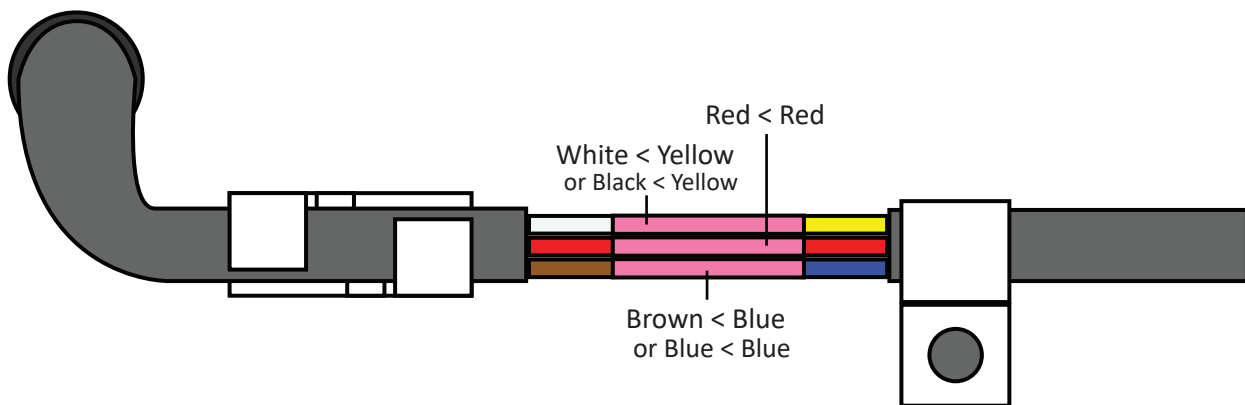

WIRING CONFIGURATION - TOYOTA TUNDRA 2022-2025

1

Disconnect the vehicle battery prior to any wiring.

***Note:** The following is the recommended method of wiring the third brake light/running light. If you intend on frequently removing the cap, wiring with a quick disconnect is recommended.

After removing driver side factory tail light, disconnect the 3 Bulbs completely removing the tail light.



Drill a 3/8" hole 3 Inches below the bolt on the driver side in the back of the truck bed to feed the Expedition wiring harness. Use the rubber grommet in the drilled hole to prevent the wiring from chafing.

***Note:** Splices will be used on the middle brake light.

Connect the wiring harness based on the color wiring diagram below

Use the 3 provided Quick Splices and Expedition Cap wiring harness


Provided quick splices are not insulated, it is recommended to cover connections with heat shrink tube and/or electrical tape

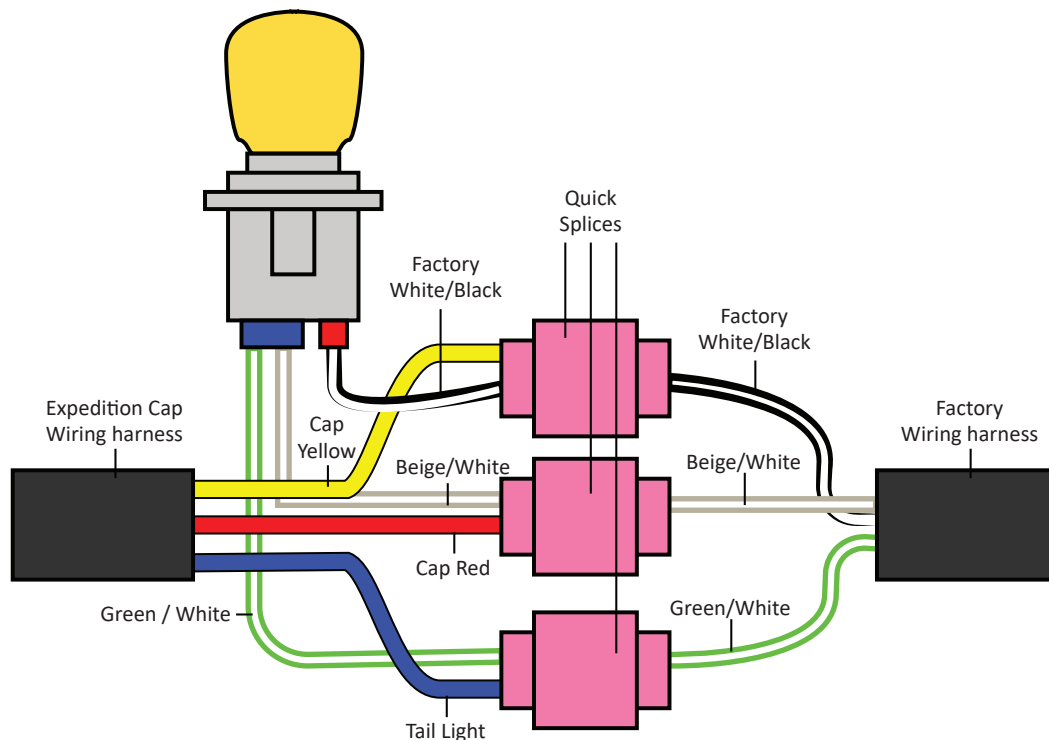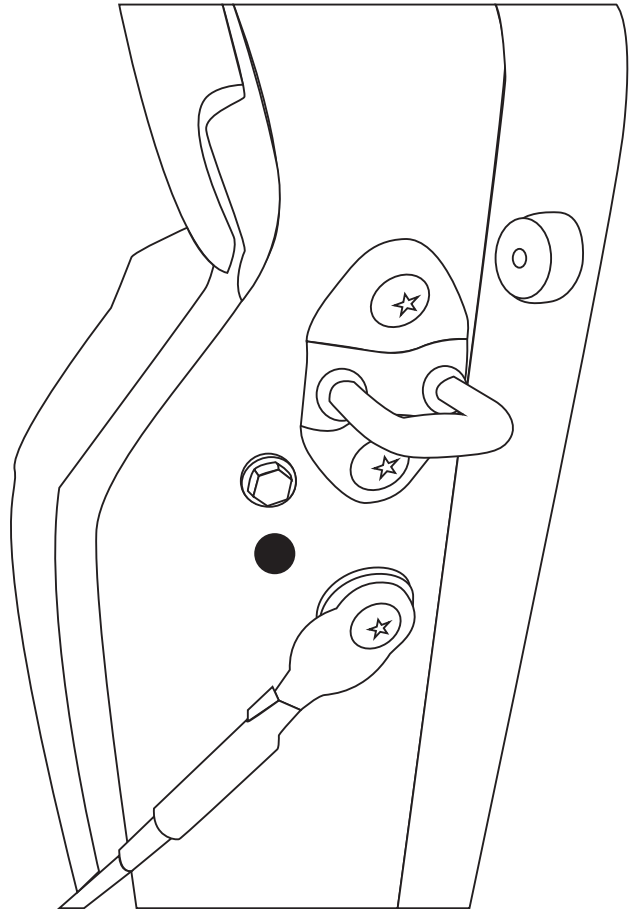


TOYOTA TUNDRA 2022-2025 (CONT.)

2

Route the wiring harness through the pre-installed wiring guides to meet the 3rd brake light.

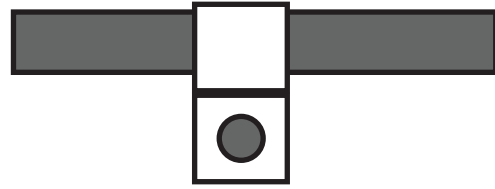

For extra cable management, use the adhesive clips to protect the wiring harness from being manipulated.

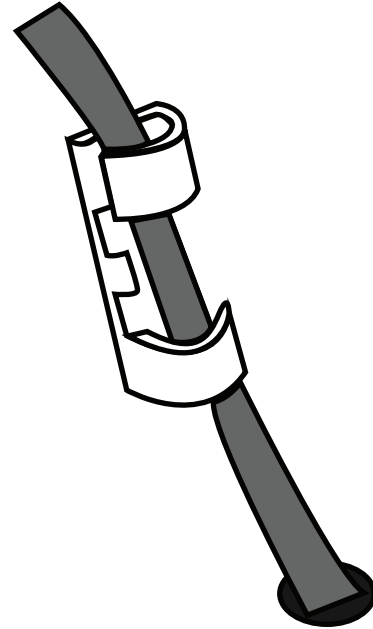


Using the 3 Butt connectors, connect the 3rd brake light wiring to the provided wiring harness
Using the diagram below

Once connections are made, use heat gun to heat shrink butt connectors. Once complete, cover wires and butt connector with electric tape.

For the wiring to the 3rd brake light,

Yellow Wire > White Wire
Red Wire > Red Wire
Blue Wire > Brown Wire

Reconnect battery when finished, test light for function.

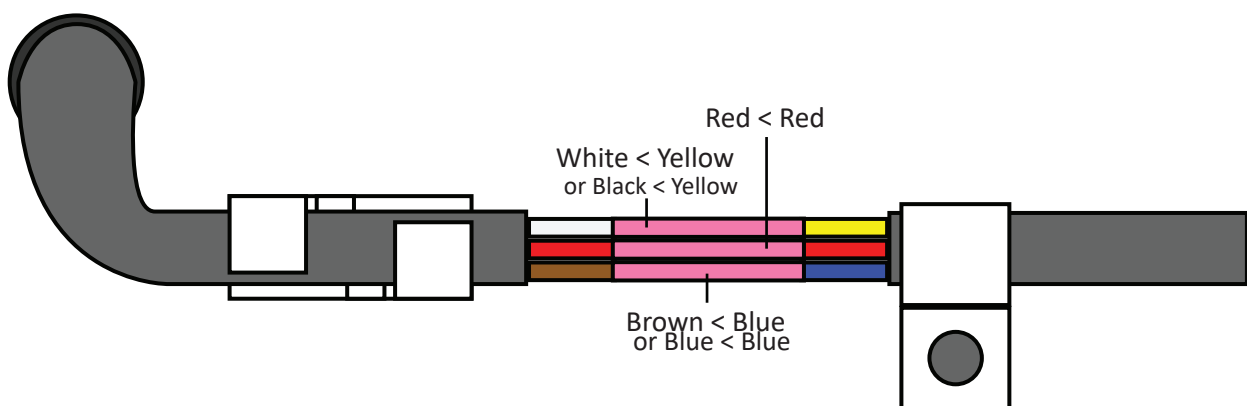

WIRING CONFIGURATION - TOYOTA TUNDRA 2007-2021

1

Disconnect the vehicle battery prior to any wiring.

***Note:** The following is the recommended method of wiring the third brake light/running light. If you intend on frequently removing the cap, wiring with a quick disconnect is recommended.

After removing driver side factory tail light, disconnect the 3 Bulbs completely removing the tail light.



Route wiring harness from the taillight pocket, though the existing bed hole approximately 3 inches below the bed rail on the driver side. Feed the Expedition wiring harness up into the bed.

Note: Option use of a 5/8" rubber grommet can be used for the factory bed hole to prevent the wiring from chafing.

***Note:** Splices will be used on the bottom brake light

Connect the wiring harness based on the color wiring diagram below.

Use the 3 provided Quick Splices and Expedition Cap wiring harness Provided quick splices are not insulated, it is recommended to cover connections with heat shrink tube and/or electrical tape

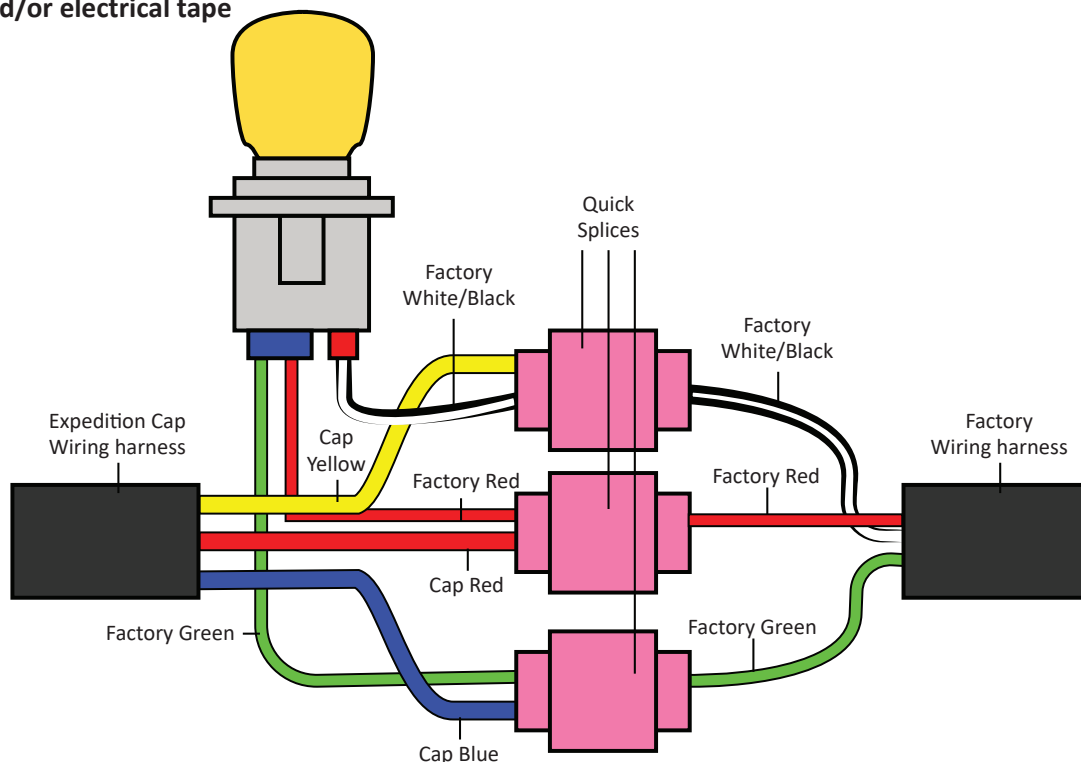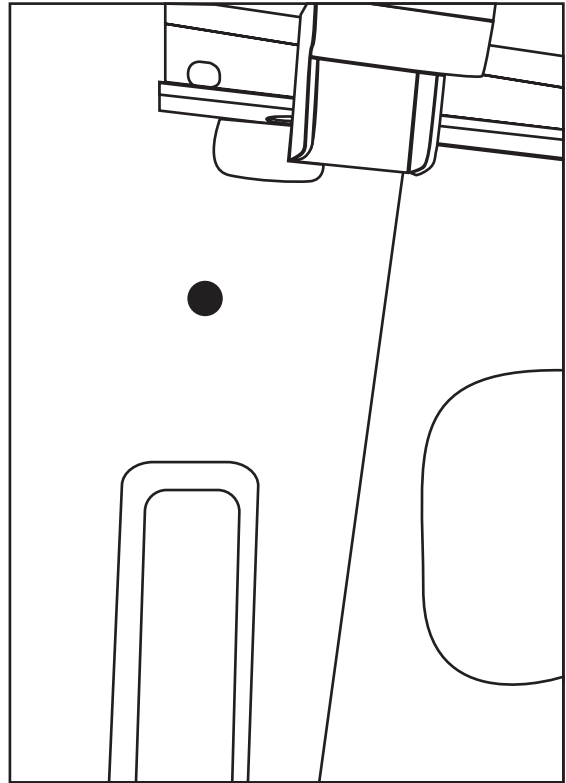

TOYOTA TUNDRA 2007-2021 (CONT.)

2



Route the wiring harness through the pre-installed wiring guides to meet the 3rd brake light

For extra cable management, use the adhesive clips to protect the wiring harness from being manipulated.

Using the 3 Butt connectors, connect the 3rd brake light wiring to the provided wiring harness

Using the diagram below Once connections are made, use heat gun to heat shrink butt connectors.

Once complete, cover wires and butt connector with electric tape.

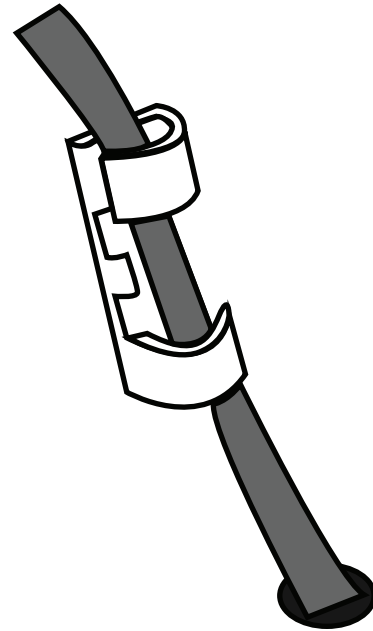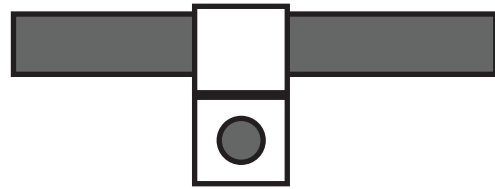


For the wiring to the 3rd brake light,

Yellow Wire > White Wire

Red Wire > Red Wire

Blue Wire > Brown Wire

Reconnect battery when finished, test light for function.

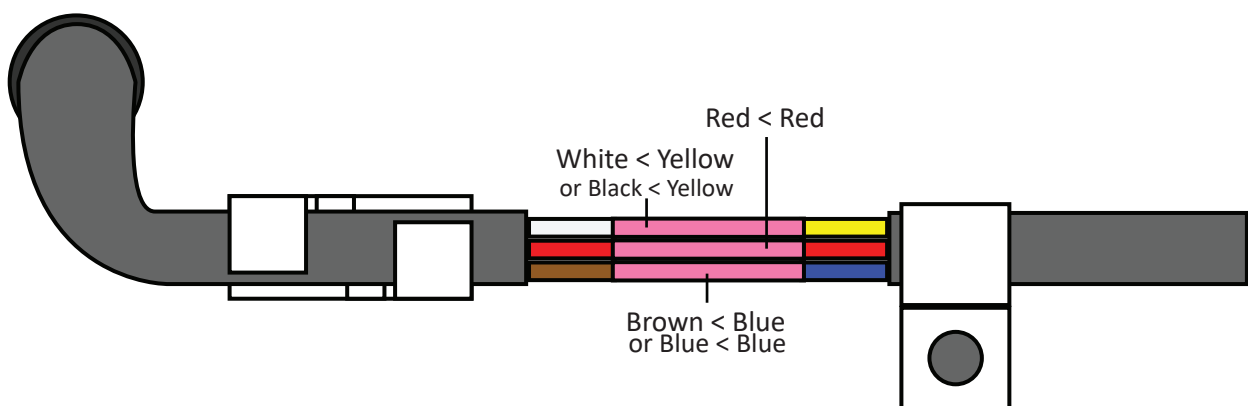

WIRING CONFIGURATION - JEEP GLADIATOR 2020-2025

AS OF 7-10-2024, THE JEEP GLADIATOR NO LONGER HAS A THIRD BRAKE LIGHT ON THE EXPEDITION TRUCK CAP.

1

Disconnect the vehicle battery prior to any wiring.

***Note:** The following is the recommended method of wiring the third brake light/running light. If you intend on frequently removing the cap, wiring with a quick disconnect is recommended.

After removing driver side factory taillight, disconnect the taillight from the wiring harness from the taillight.

Enlarge the factory hole in the bed to allow the provided wiring harness to go through the bed. Drill a hole 3/8" hole approx. 3 Inches below the bedrail on the driver side in the back of the truck bed to feed the Expedition wiring harness.


Use the included rubber grommet in the drilled hole to prevent the wiring from chafing.

***Note:** Qty 2 quick splices will be used on the factory brake light wiring harness. One wire of the provided wiring harness will be grounded to the vehicle.

Connect the wiring harness based on the color wiring diagram below.

Taillight brake light is yellow wire to the far left. Quick splice the red wire from the provided Expedition Cap harness to the yellow wire in the vehicle harness.

Running light is the factory white and grey wire. Quick splice the provided Expedition cap harness blue wire to the factory white and grey the vehicle harness.

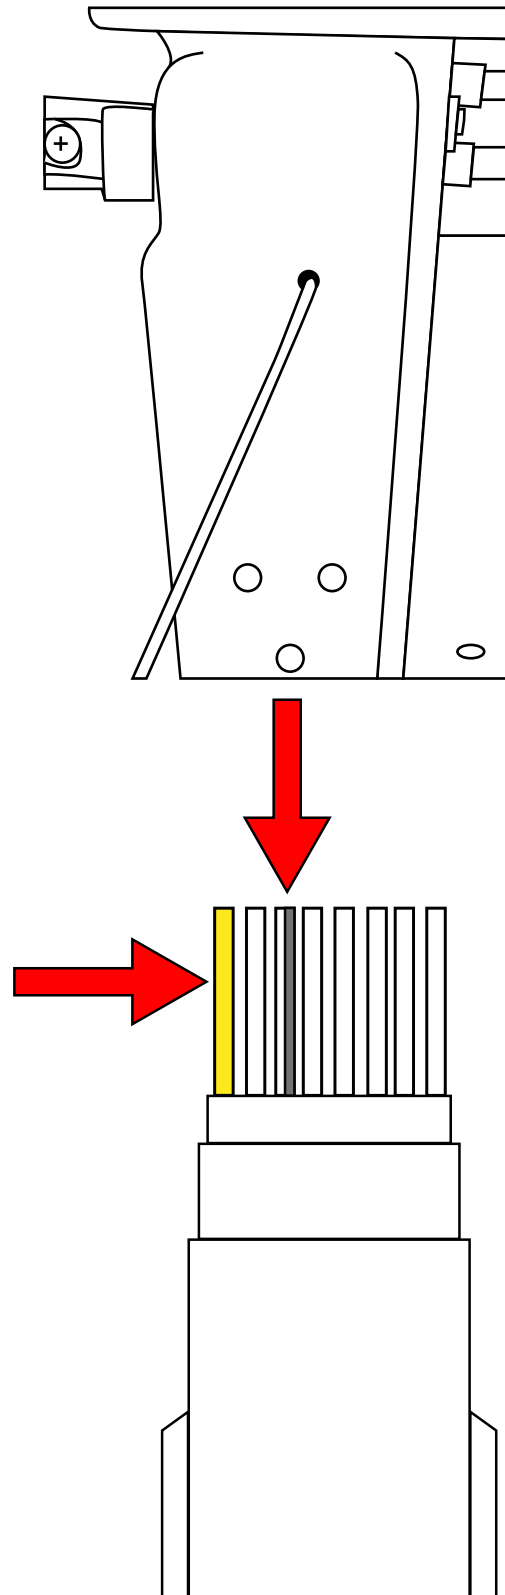

JEEP GLADIATOR 2020-2025 (CONT.)

2

***Note:** it may be required to trim factory harness loom to access the factory wires to use the provided quick splices.

***Note:** It may also be required to cut the provided wiring harness loom to give enough slack to use quick splices to the vehicle factory harness and to ground the provided Expedition cap wiring harness.

Install ring butt connector to the yellow wire of the provided Expedition cap wiring harness. Heat shrink connection and cover with electrical tape.

Secure the ground to the factory bed bolt located behind the taillight using the provided nut.

Note: Provided quick splices are not insulated, it is recommended to cover connections with heat shrink tube and/or electrical tape

Route the wiring harness through the preinstalled wiring guides to meet the 3rd brake light

Using the 3 Butt connectors, connect the 3rd brake light wiring to the provided wiring harness

Using the diagram below Once connections are made, use heat gun to heat shrink butt connectors.

Once complete, cover wires and butt connector with electric tape.



For the wiring to the 3rd brake light,

White Wire > Yellow Wire

Red Wire > Red Wire

Blue Wire > Brown Wire

Reconnect battery when finished, test light for function.

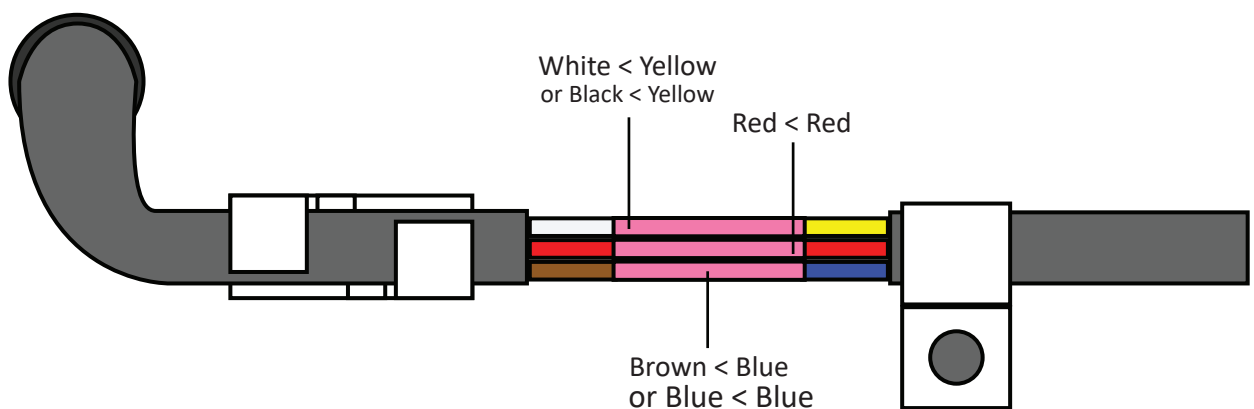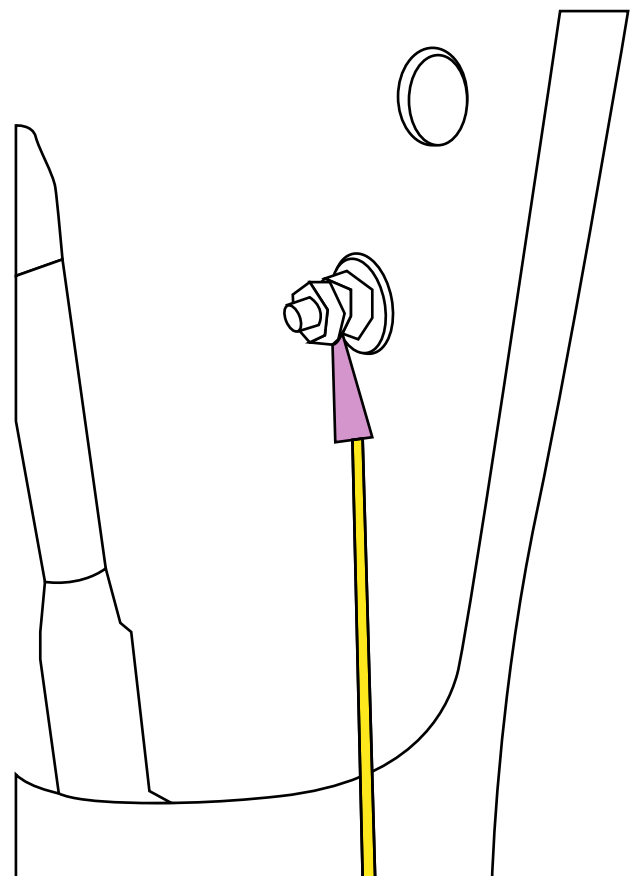

WIRING CONFIGURATION - FORD F-150 2021-2025

1

Note: Due to the tail light wiring configuration, the topper's brake light will blink with the left turn signal

After confirming wiring leads, disconnect the vehicle battery prior to any wiring.

***Note:** The following is the recommended method of wiring the third brake light/running light. If you intend on frequently removing the cap, wiring with a quick disconnect is recommended.

After removing driver side factory taillight, disconnect the break wiring harness to completely remove the tail light.




Route wiring harness from the factory hole in the bed and back down into the taillight assembly.
Note: Use provided rubber grommet for the factory bed hole to prevent the wiring from chafing.

***Note:** Splices will be used on the brake light bulb wiring. It may be necessary to cut factory loom to gain access to the wires.

Connect the provided Expedition Cap wiring harness based on the color wiring diagram below.

Running light is purple with green stripe, which is 3rd from the left bottom.

Brake light is white with green stripe, which is second from the far right top row.

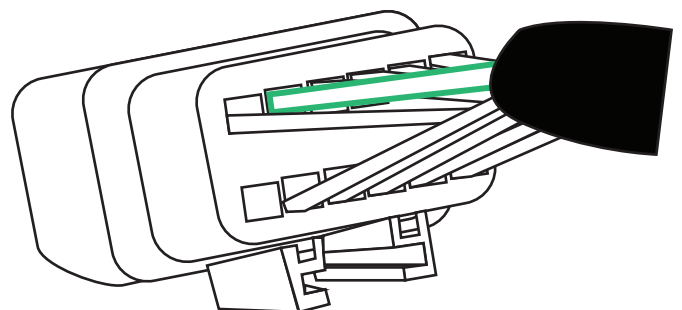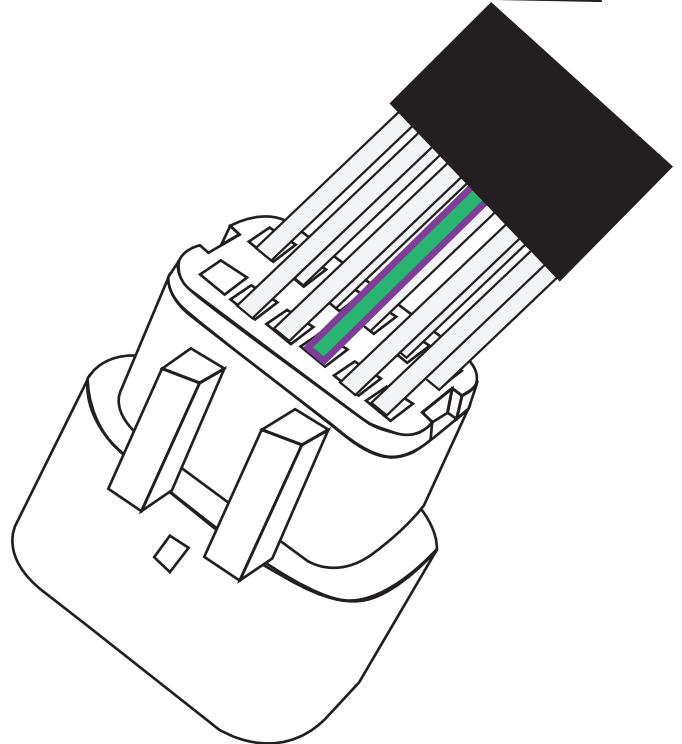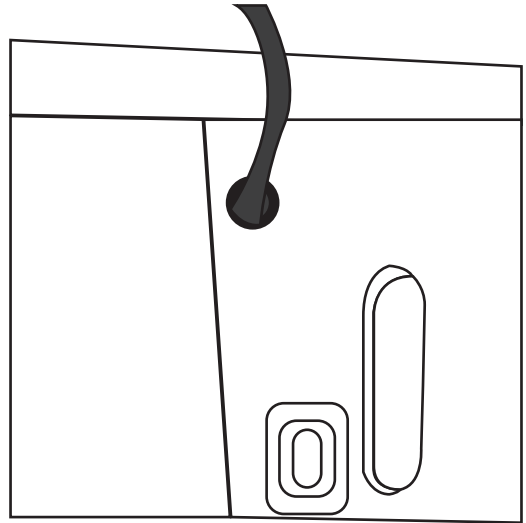

Expedition Truck Cap

SET-UP & CARE INSTRUCTIONS

IT IS HIGHLY RECOMMENDED TO HAVE AUTOMOTIVE ELECTRONICS PROFESSIONAL COMPLETE THE INSTALLATION TO ENSURE THE THIRD BRAKE LIGHT FUNCTIONS CORRECTLY. TALK TO A WIRING SPECIALIST BEFORE SETTING UP THE WIRING PORTION.

FORD F-150 2021-2025 (CONT.)

2

Use the 2 provided Quick Splices and Expedition Cap wiring harness. Provided quick splices are not insulated, it is recommended to cover connections with heat shrink tube and/or electrical tape followed by wire loom to prevent wiring from snagging or being exposed.



Cap Yellow > Provided Black Ground (run down to chassis ground)

Cap Blue > Factory Purple with Green Stripe

Cap Red > Factory White with Green Stripe

The ground will need to be extended. Using the included butt connector, extend the yellow wire in the provided wiring harness with the provided black wire. Attach the ring connector to the end of the provided black wire. Heat shrink and cover all connections.

The ground will be routed down the brake light wiring to connect to the factory chassis ground connection. It is recommended you zip tie the ground wire to the factory wiring harness to keep it up and routed away from the exhaust.

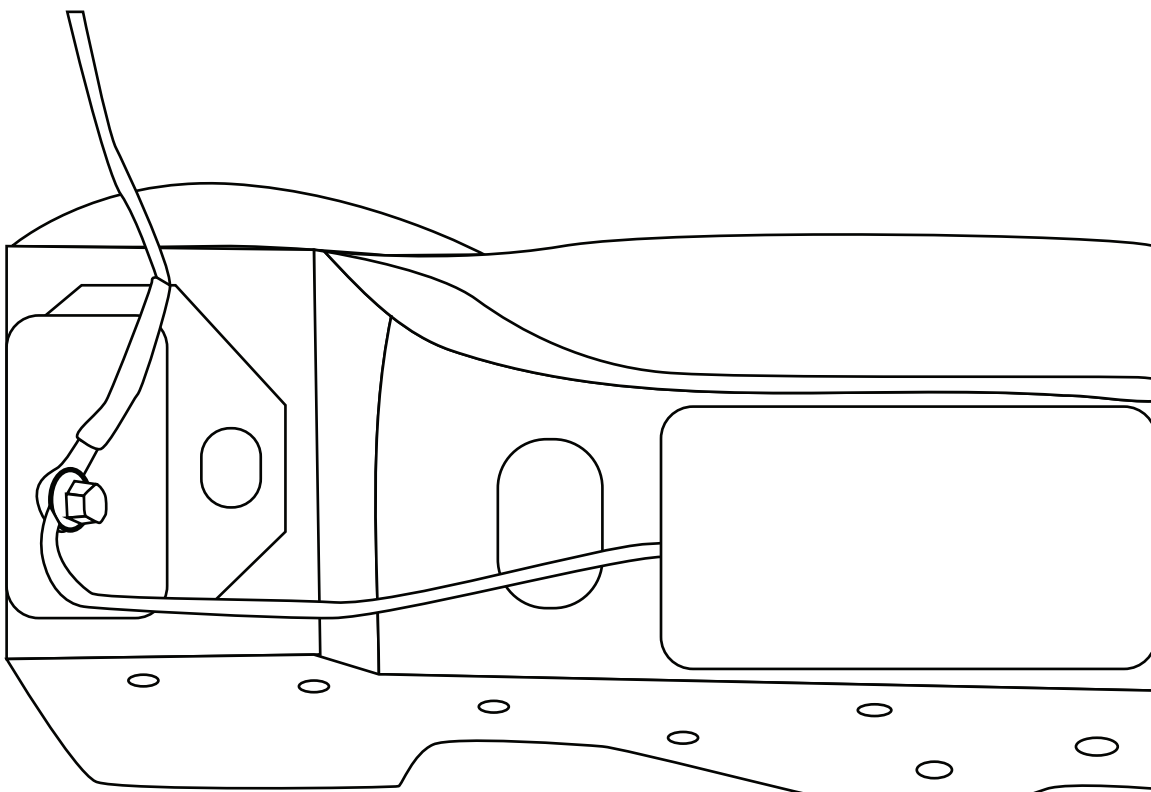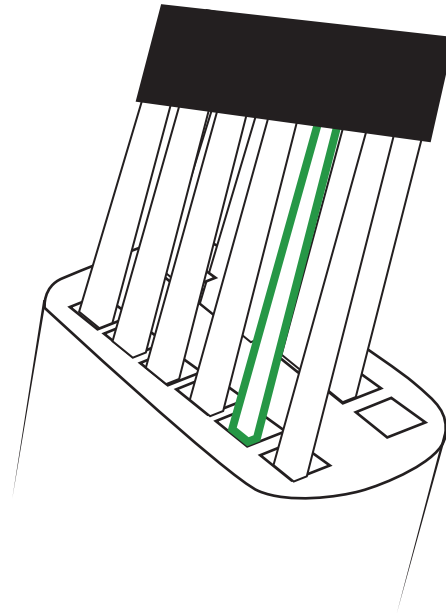

WIRING CONFIGURATION - FORD F-250 2017-2022

1

After confirming wiring leads, disconnect the vehicle battery prior to any wiring.

***Note:** The following is the recommended method of wiring the third brake light/running light. If you intend on frequently removing the cap, wiring with a quick disconnect is recommended.

After removing driver side factory taillight, disconnect the brake wiring harness to completely remove the tail light.

Route wiring harness from the factory hole in the bed and back down into the taillight assembly. Note: Use provided rubber grommet for the factory bed hole to prevent the wiring from chafing.


***Note:** 3 Splices will be used on the brake, running, and ground light bulb wiring. It may be necessary to cut factory loom to gain access to the wires.

Connect the provided Expedition Cap wiring harness based on the color wiring diagram below.

Running light is blue/white, which is the middle wire.


Brake light is green/white, which is the bottom wire

Ground wire is black/white, the top wire

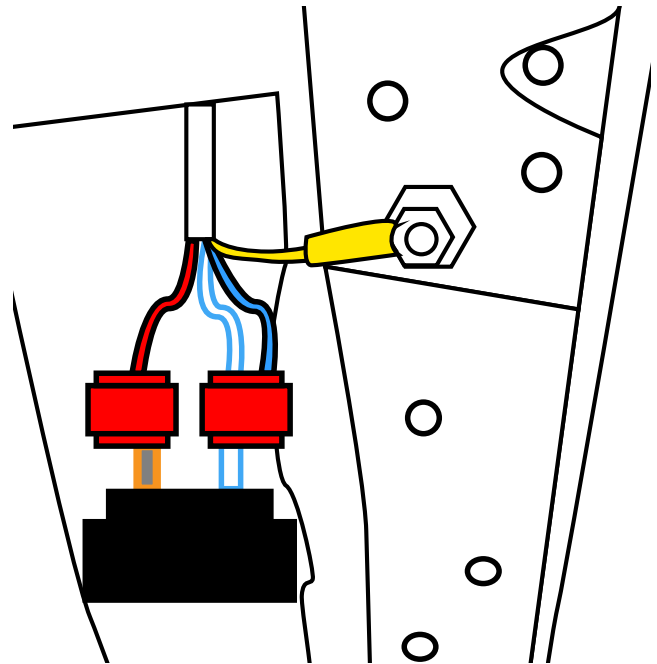

For the wiring to the 3rd brake light,
Yellow Wire > White Wire
Red Wire > Red Wire
Blue Wire > Brown Wire

Reconnect battery when finished, test light for function.

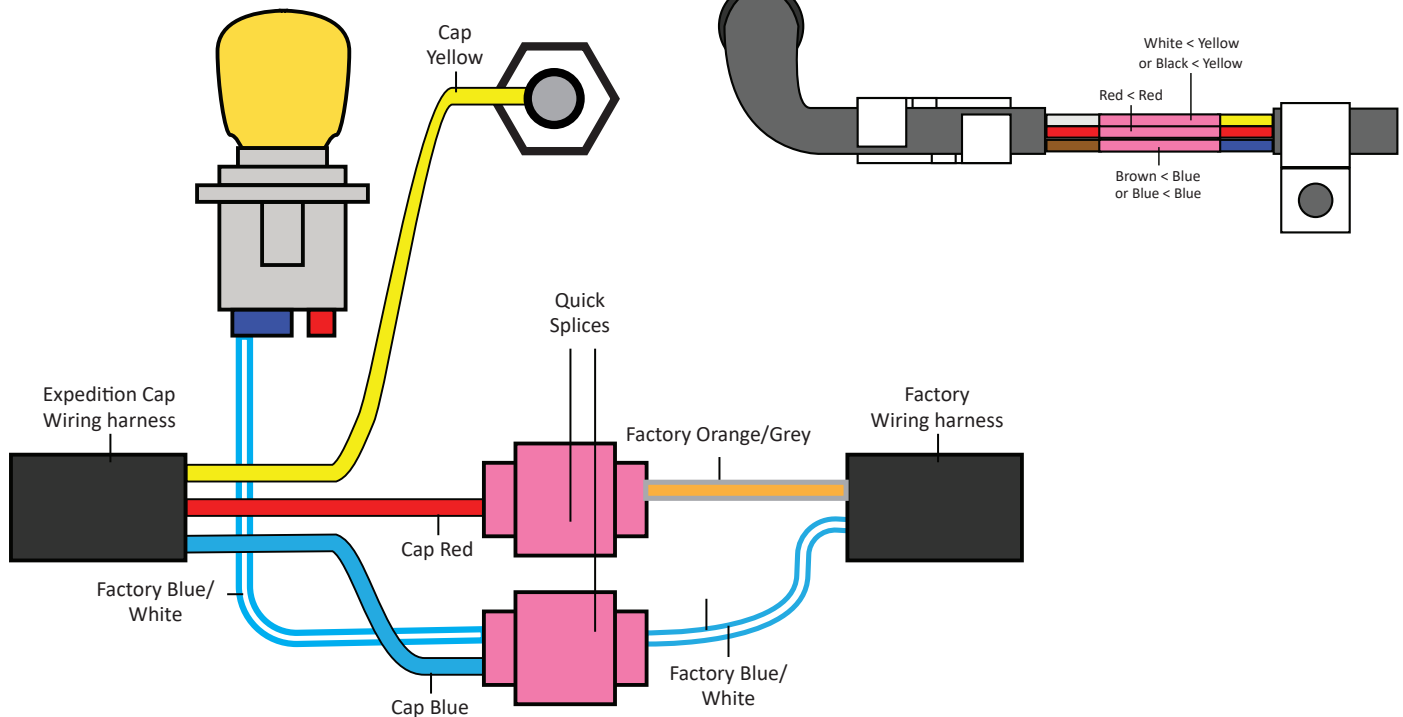

WIRING CONFIGURATION - FORD F-250 2023-2025

1

After confirming wiring leads, disconnect the vehicle battery prior to any wiring.

***Note:** The following is the recommended method of wiring the third brake light/running light. If you intend on frequently removing the cap, wiring with a quick disconnect is recommended.

After removing driver side factory taillight, disconnect the brake wiring harness to completely remove the tail light.

Route wiring harness from the factory hole in the bed and back down into the taillight assembly. **Note:** Use provided rubber grommet for the factory bed hole to prevent the wiring from chafing.



***Note:** 3 Splices will be used on the brake, running, and ground light bulb wiring. It may be necessary to cut factory loom to gain access to the wires.

Connect the provided Expedition Cap wiring harness based on the color wiring diagram below.

Running light is blue/white, which is the middle wire.


Brake light is green/white, which is the bottom wire

Ground wire is black/white, the top wire

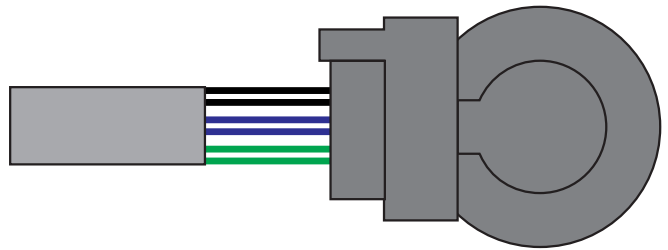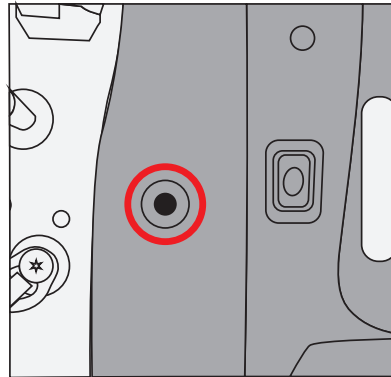

For the wiring to the 3rd brake light,
Yellow Wire > White Wire
Red Wire > Red Wire
Blue Wire > Brown Wire

Reconnect battery when finished, test light for function.

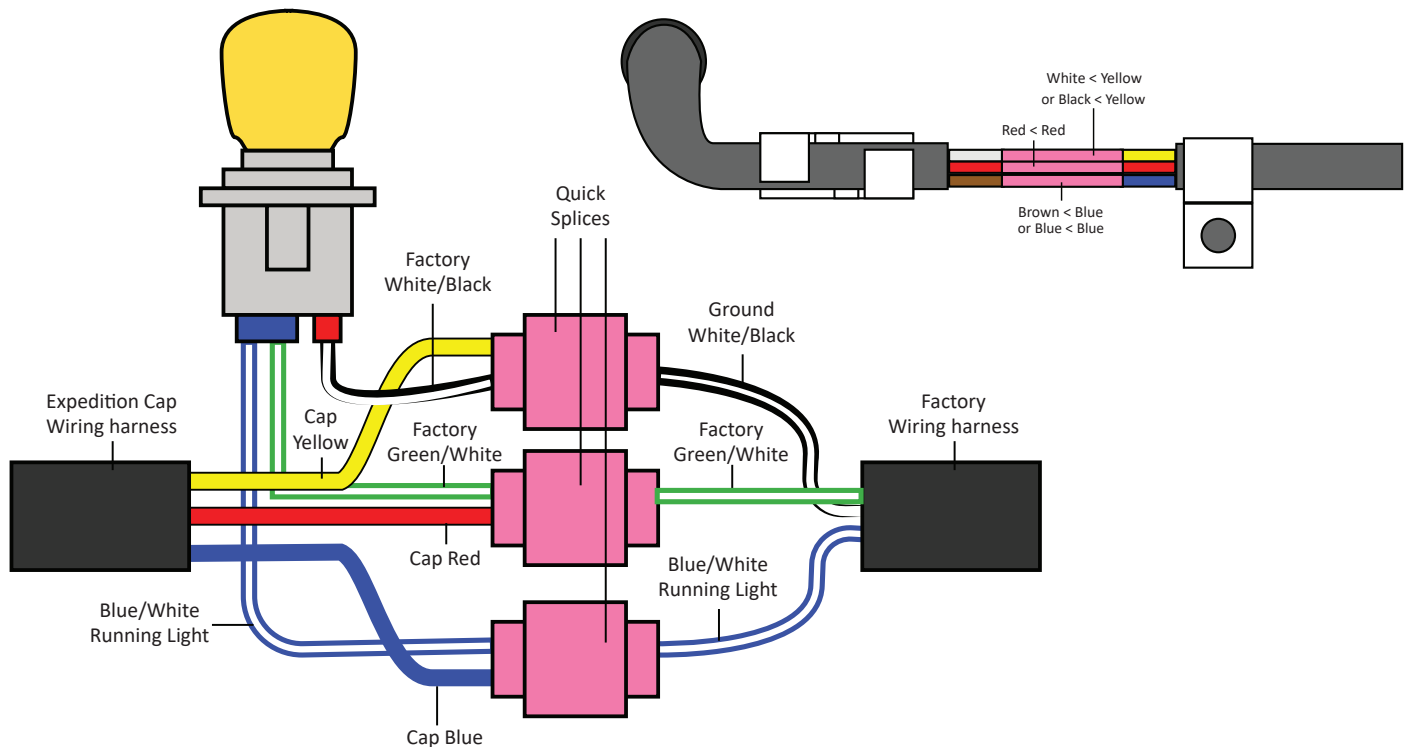

WIRING CONFIGURATION - FORD RANGER 2019-2023

1


Disconnect the vehicle battery prior to any wiring.

***Note:** The following is the recommended method of wiring the third brake light/running light. If you intend on frequently removing the cap, wiring with a quick disconnect is recommended.

After removing driver side factory taillight, disconnect the taillight by pulling up on the red connection lock and pressing the grey tab and release the wiring harness from the taillight.

Drill a hole 3/8" hole approx. 3 inches below the bedrail on the driver side in the back of the truck bed to feed the Expedition wiring harness. Use the included rubber grommet in the drilled hole to prevent the wiring from chafing.

***Note:** Qty 2 quick splices will be used on the factory brake light wiring harness. One wire of the provided wiring harness will be grounded to the vehicle.

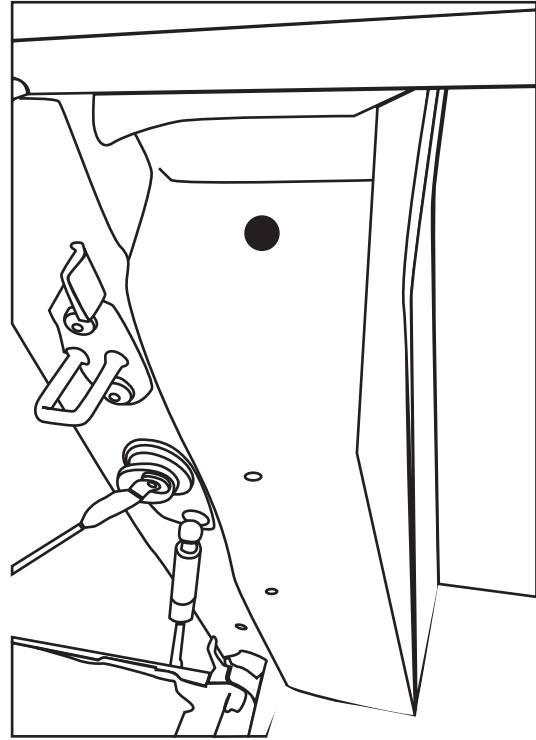


Connect the wiring harness based on the color wiring diagram below.

Taillight brake light is red wire second terminal from the far right on the top with the red tab facing towards the top. Quick splice the red wire from the provided Expedition Cap harness to the red wire in the vehicle harness in the top 2nd from the top far right.

Running light is terminal to the left of the brake light. Top row third from the far right with red tab facing towards the top. Factory vehicle wire color is black with white stripe. Quick splice the provided Expedition cap harness blue wire to the black and white wire in the vehicle harness in the third from the top far right terminal.

***Note:** it may be required to trim factory harness loom to access the factory wires to use the provided quick splices.

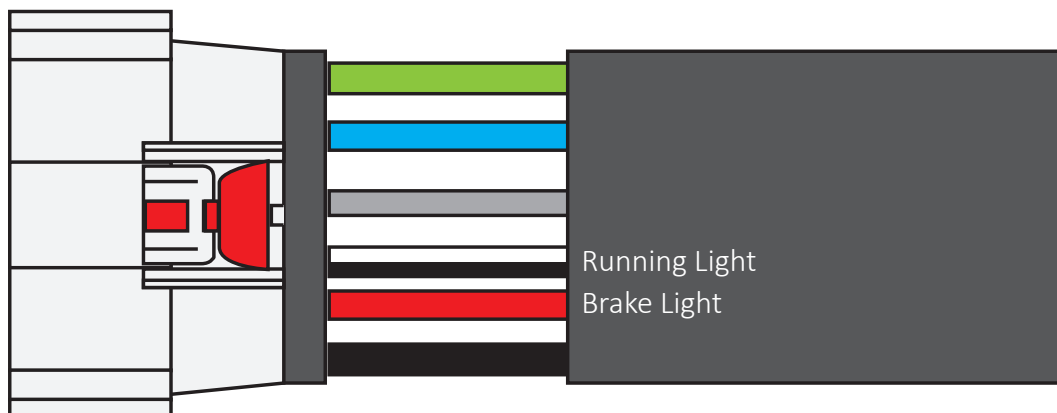

2

***Note:** It may also be required to cut the provided wiring harness loom to give enough slack to use quick splices to the vehicle factory harness and to ground the provided Expedition cap wiring harness.

Install ring butt connector to the yellow wire of the provided Expedition cap wiring harness. Heat shrink connection and cover with electrical tape. Secure the ground to the factory bed bolt located behind the taillight using the provided nut.

Note: Provided quick splices are not insulated, it is recommended to cover connections with heat shrink tube and/or electrical tape

Route the wiring harness through the preinstalled wiring guides to meet the 3rd brake light



For extra cable management, use the adhesive clips to protect the wiring harness from being manipulated.

Using the 3 Butt connectors, connect the 3rd brake light wiring to the provided wiring harness. Using the diagram below Once connections are made, use heat gun to heat shrink butt connectors.

Once complete, cover wires and butt connector with electric tape.

For the wiring to the 3rd brake light,
Yellow Wire > White Wire
Red Wire > Red Wire
Blue Wire > Brown Wire

Reconnect battery when finished, test light for function.

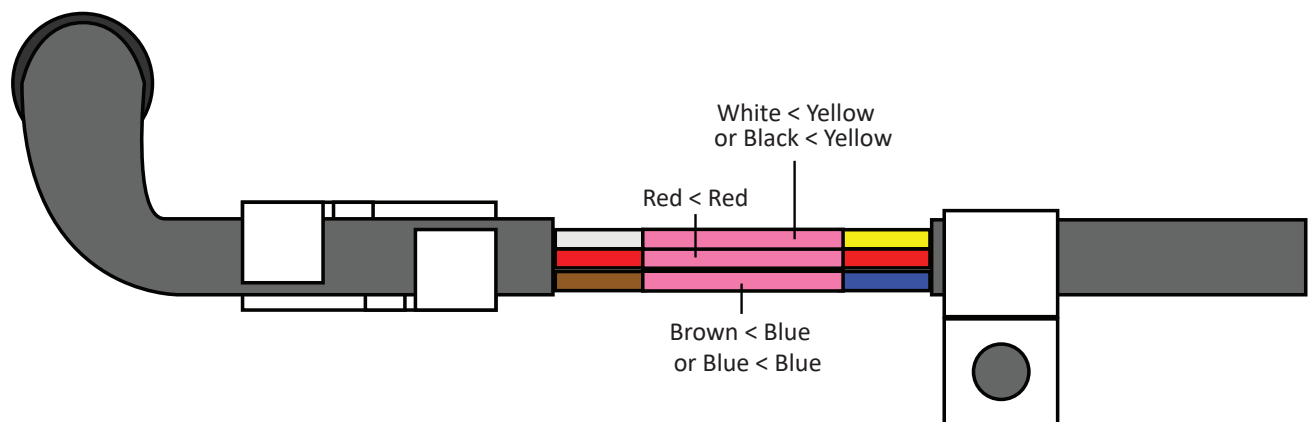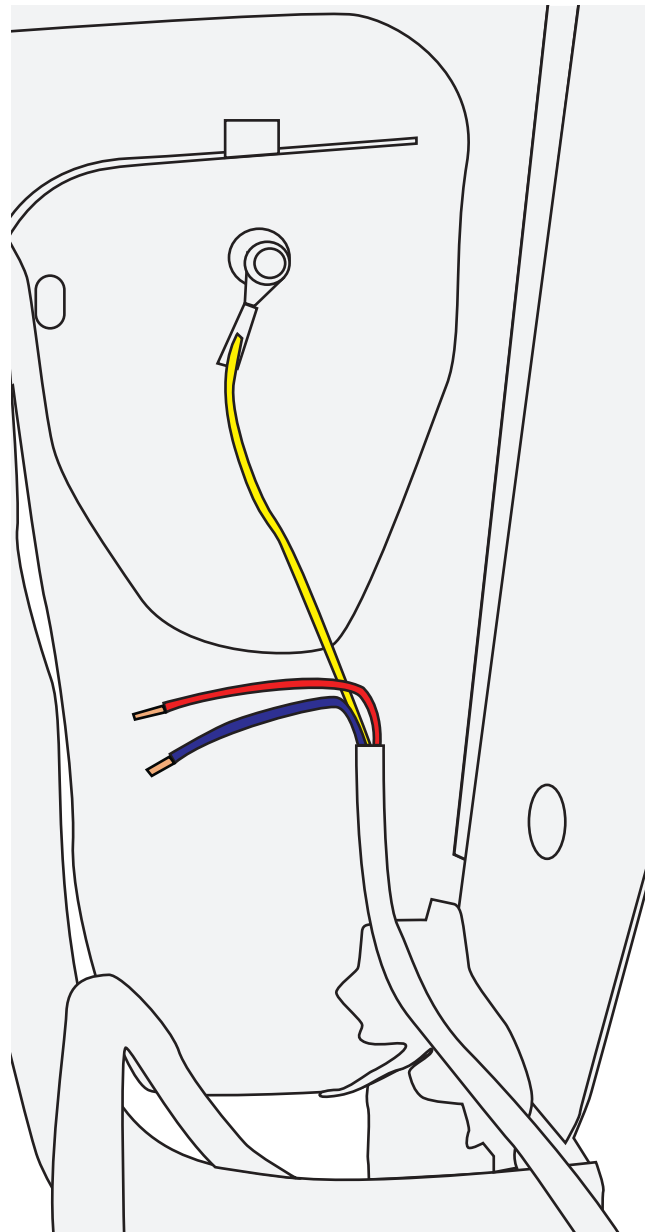

WIRING CONFIGURATION - GM 1500 2019-2025

Note: Due to the tail light wiring configuration, the top-per's brake light will blink with the left turn signal

After confirming wiring leads, disconnect the vehicle battery prior to any wiring.

***Note:** The following is the recommended method of wiring the third brake light/running light. If you intend on frequently removing the cap, wiring with a quick disconnect is recommended.

After removing driver side factory tail light, disconnect the break/running bulb completely removing the tail light.

Route wiring harness from the factory hole in the bed, through the stake pocket and back down into the taillight assembly. **Note:** Optional use of a 7/8" provided rubber grommet can be used for the factory bed hole to prevent the wiring from chafing.

***Note:** Splices will be used on the brake light bulb wiring. It may be necessary to cut factory loom to gain access to the wires.




Connect the wiring harness based on the color wiring diagram below.

Use the 3 provided Quick Splices and Expedition Cap wiring harness Provided quick splices are not insulated, it is recommended to cover connections with heat shrink tube and/or electrical tape followed by wire loom to prevent wiring from snagging or being exposed.

Cap Yellow > Factory Black

Cap Blue > Factory Grey


Cap Red > Factory Green

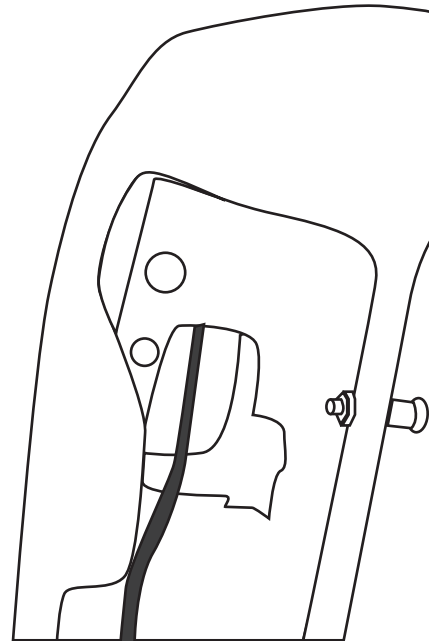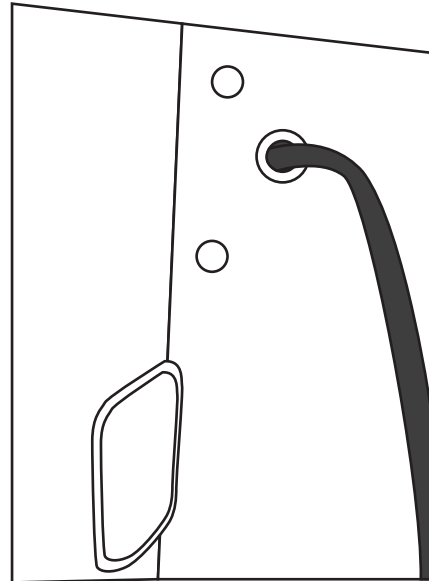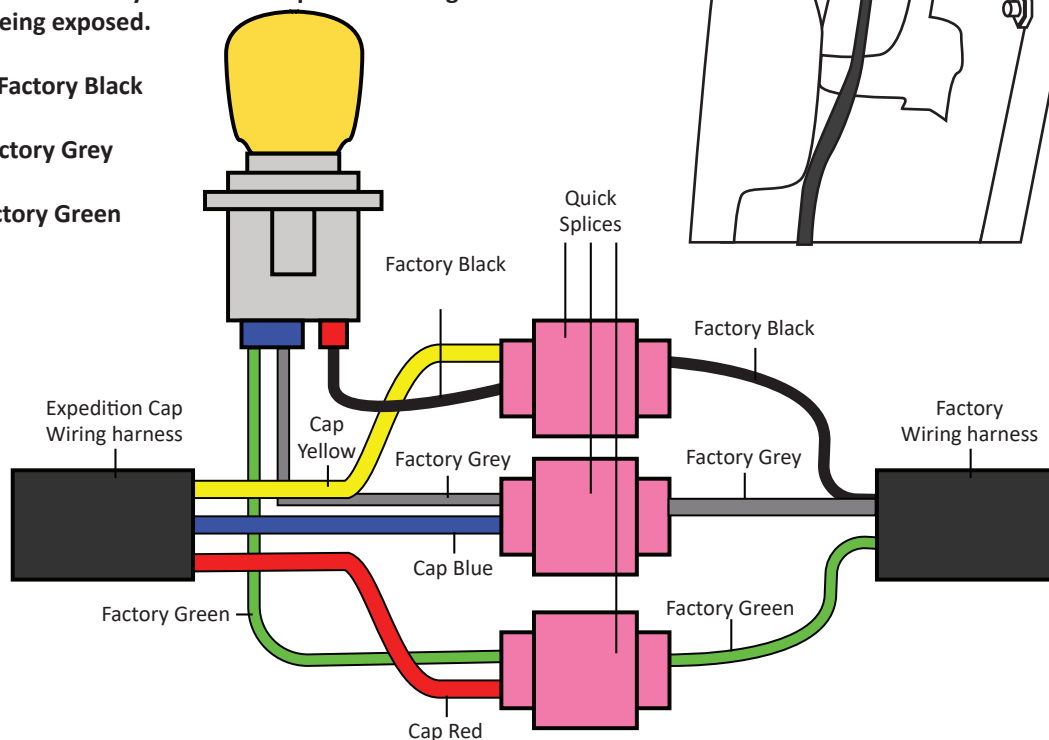

2

For the wiring to the 3rd brake light,
Yellow Wire > White Wire
Red Wire > Red Wire
Blue Wire > Brown Wire

Reconnect battery when finished, test light for function.

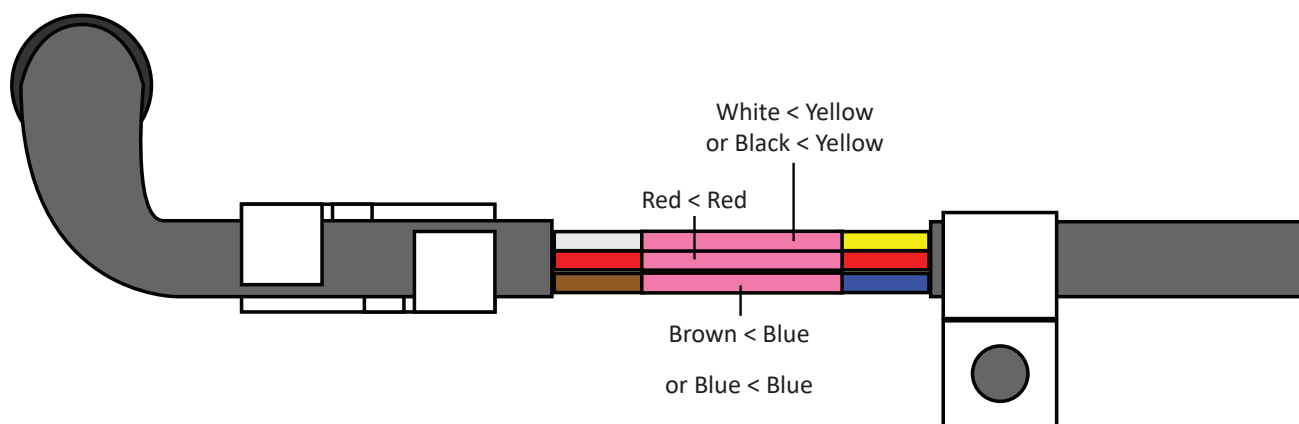

Expedition Truck Cap

SET-UP & CARE INSTRUCTIONS

IT IS HIGHLY RECOMMENDED TO HAVE AUTOMOTIVE ELECTRONICS PROFESSIONAL COMPLETE THE INSTALLATION TO ENSURE THE THIRD BRAKE LIGHT FUNCTIONS CORRECTLY. TALK TO A WIRING SPECIALIST BEFORE SETTING UP THE WIRING PORTION.

WIRING CONFIGURATION - GM COLORADO/CANYON 15-22

Note: Due to the tail light wiring configuration, the top-per's brake light will blink with the left turn signal

After confirming wiring leads, disconnect the vehicle battery prior to any wiring.

***Note:** The following is the recommended method of wiring the third brake light/running light. If you intend on frequently removing the cap, wiring with a quick disconnect is recommended.

After removing driver side factory tail light, disconnect the break/running bulb completely removing the tail light.

Route wiring harness from the factory hole in the bed, through the stake pocket and back down into the taillight assembly. **Note:** Optional use of a 7/8" provided rubber grommet can be used for the factory bed hole to prevent the wiring from chafing.

***Note:** Splices will be used on the brake light bulb wiring. It may be necessary to cut factory loom to gain access to the wires.




Connect the wiring harness based on the color wiring diagram below.

Use the 3 provided Quick Splices and Expedition Cap wiring harness Provided quick splices are not insulated, it is recommended to cover connections with heat shrink tube and/or electrical tape followed by wire loom to prevent wiring from snagging or being exposed.

Cap Yellow > Factory Black

Cap Blue > Factory Grey

Cap Red > Factory Green

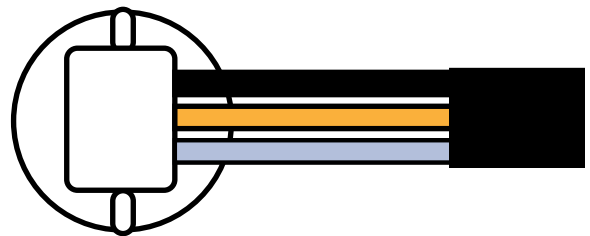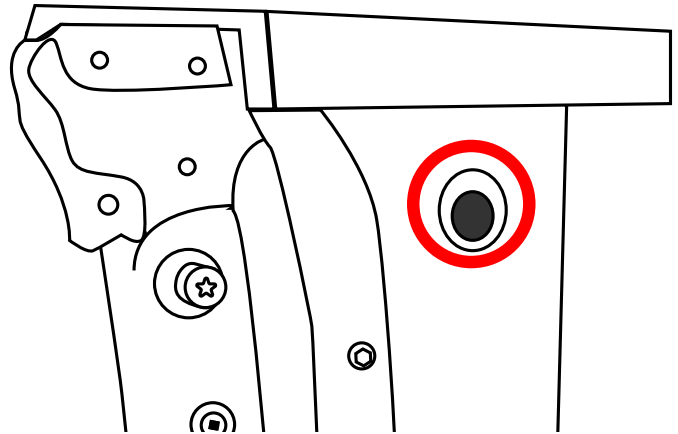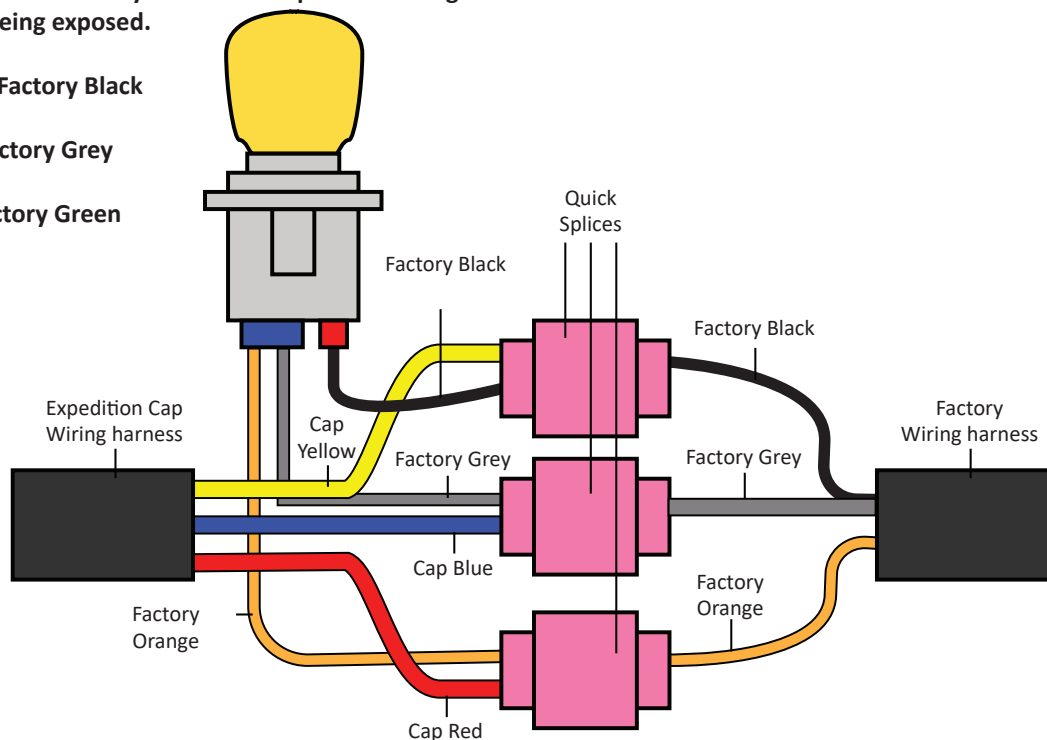


GM COLORADO/CANYON 15-22 (CONT)

2

For the wiring to the 3rd brake light,
Yellow Wire > White Wire
Red Wire > Red Wire
Blue Wire > Brown Wire

Reconnect battery when finished, test light for function.

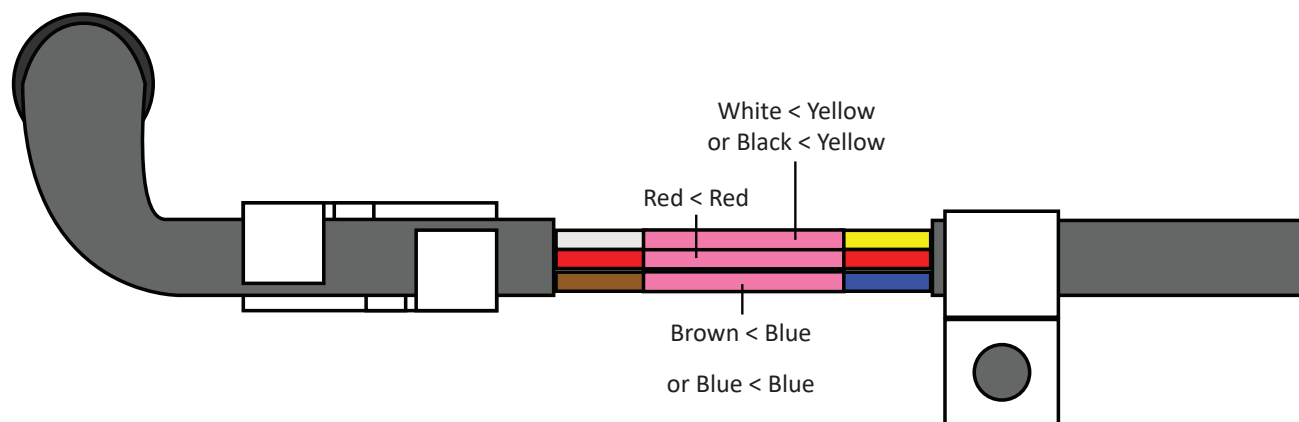

WIRING CONFIGURATION - GM COLORADO/CANYON 2023-2025

After confirming wiring leads, disconnect the vehicle battery prior to any wiring.

***Note:** The following is the recommended method of wiring the third brake light/running light. If you intend on frequently removing the cap, wiring with a quick disconnect is recommended.

After removing driver side factory tail light, disconnect the break/running bulb completely removing the tail light.

Route wiring harness from the factory hole in the bed, through the stake pocket and back down into the taillight assembly. **Note:** Optional use of a 7/8" provided rubber grommet can be used for the factory bed hole to prevent the wiring from chafing.

***Note:** Splices will be used on the brake light bulb wiring. It may be necessary to cut factory loom to gain access to the wires.





Connect the wiring harness based on the color wiring diagram below.

Use the 2 provided Quick Splices and Expedition Cap wiring harness. Provided quick splices are not insulated, it is recommended to cover connections with heat shrink tube and/or electrical tape followed by wire loom to prevent wiring from snagging or being exposed.

Cap Yellow > Ground

Cap Blue > Factory Blue/Yellow

Cap Red > Factory Blue/White

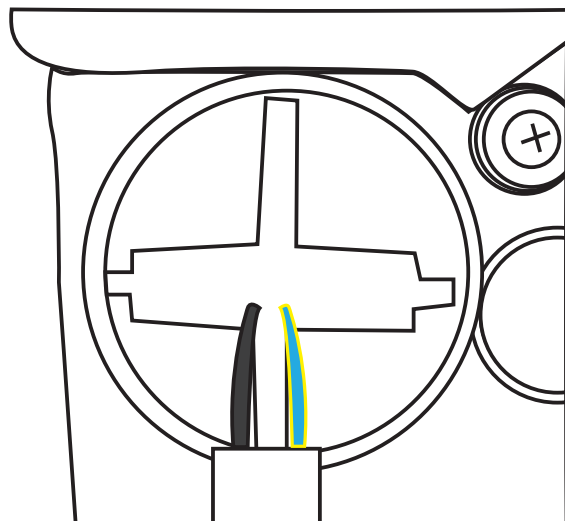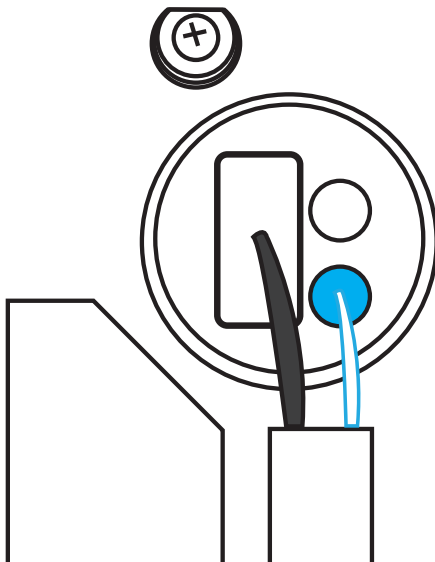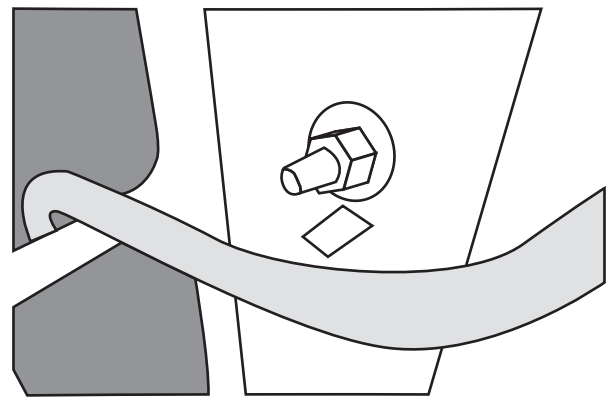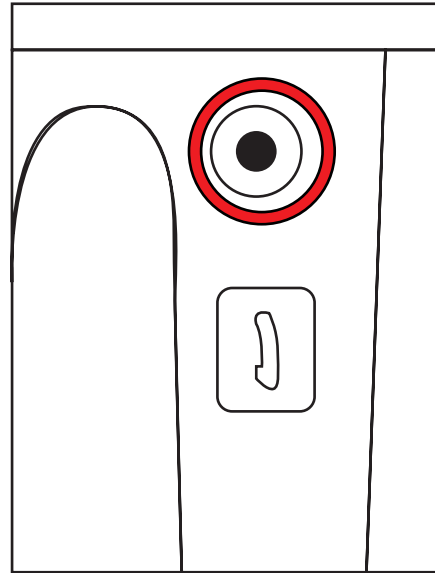


GM COLORADO/CANYON 2023-2025 (CONT)

2

For the wiring to the 3rd brake light,
Yellow Wire > White Wire
Red Wire > Red Wire
Blue Wire > Brown Wire

Reconnect battery when finished, test light for function.

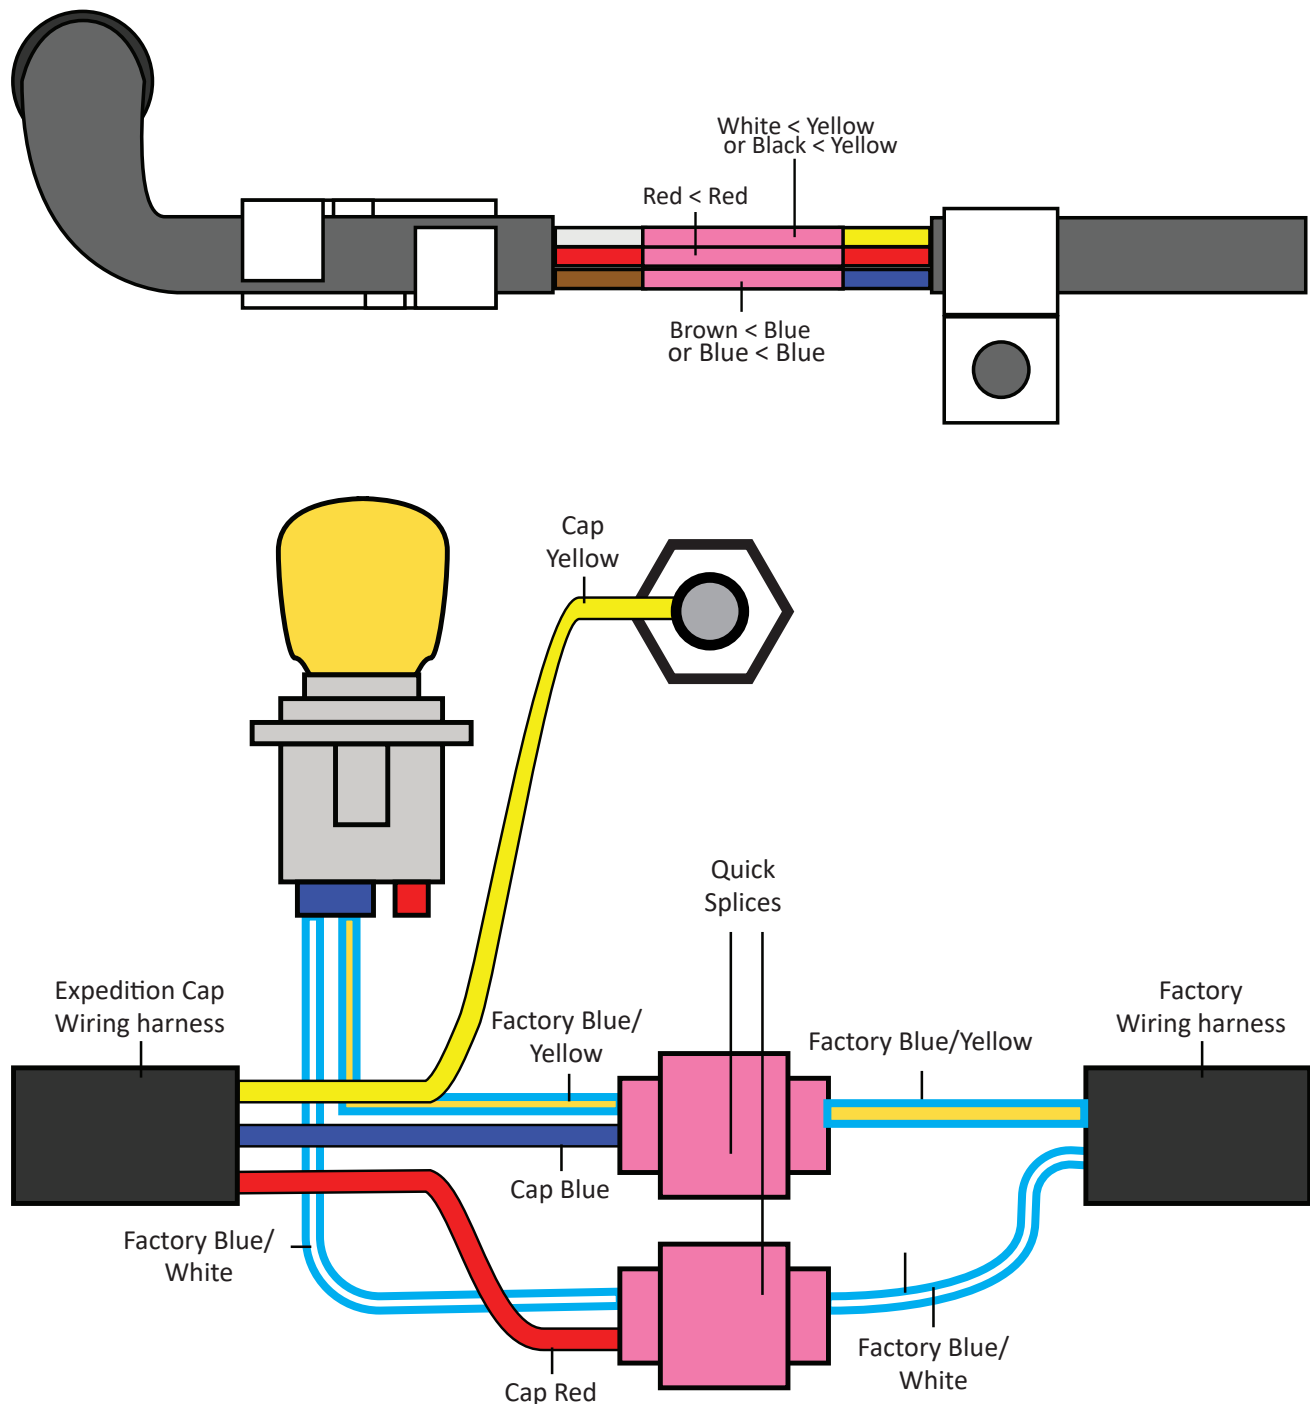

WIRING CONFIGURATION - RAM 1500 2019-2025

Note: Due to the tail light wiring configuration, the top-per's brake light will blink with the left turn signal on all 2019+ Ram Models

After confirming wiring leads, disconnect the vehicle battery prior to any wiring.

***Note:** The following is the recommended method of wiring the third brake light/running light. If you intend on frequently removing the cap, wiring with a quick disconnect is recommended.

After removing driver side factory tail light, disconnect the wire harness, completely removing the tail light.

Enlarge factory hole and drill to 3/8" hole on the driver side in the back of the truck bed to feed the Expedition wiring harness. Use the rubber grommet in the drilled hole to prevent the wiring from chafing.

***Note:** Splices will be used on the brake light bulb wiring. It may be necessary to cut factory loom to gain access to the wires.




Connect the wiring harness based on the color wiring diagram below.

Use the 2 provided Quick Splices and Expedition Cap wiring harness. Provided quick splices are not insulated, it is recommended to cover connections with heat shrink tube and/or electrical tape followed by wire loom to prevent wiring from snagging or being exposed.

Red = Brake Light

White = Running Light

Yellow = Ground/Nut

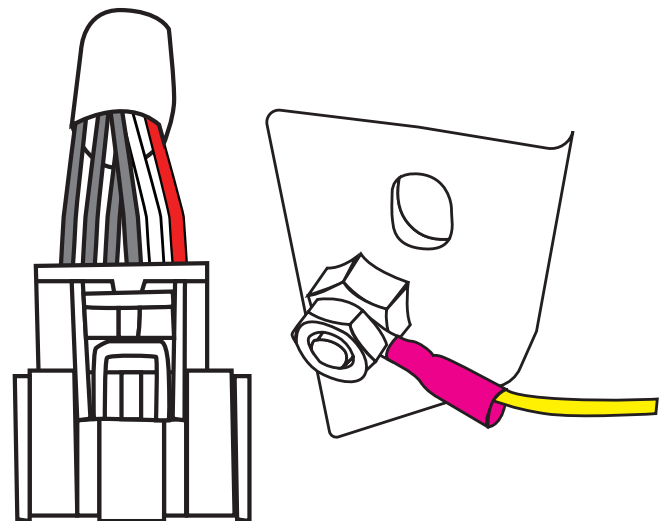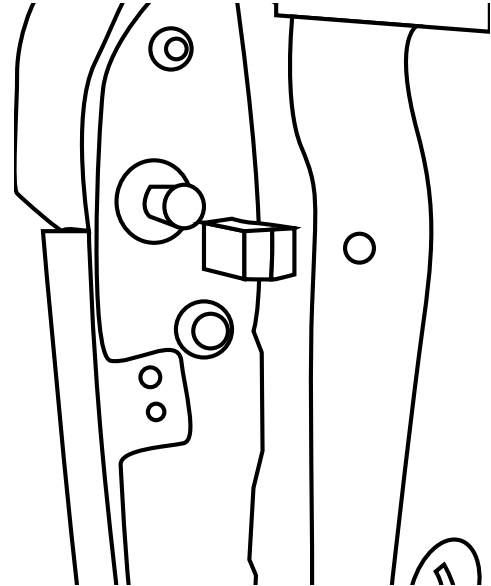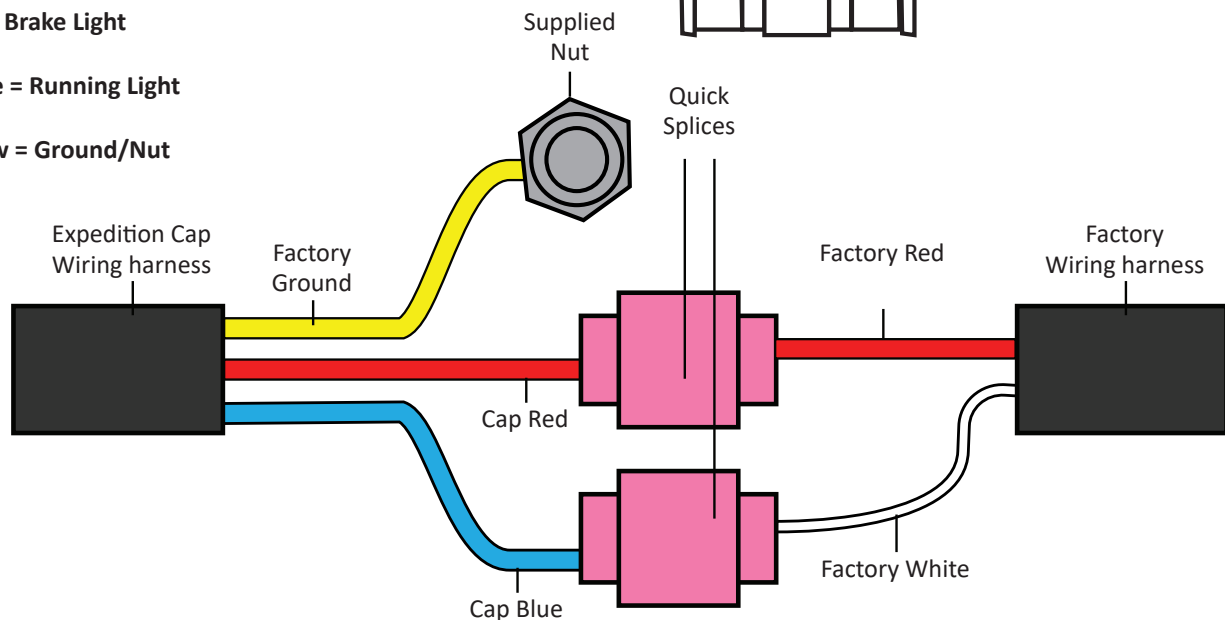


RAM 1500 2019-2025 (CONT.)

2

For the wiring to the 3rd brake light,
Yellow Wire > White Wire
Red Wire > Red Wire
Blue Wire > Brown Wire

Reconnect battery when finished, test light for function.

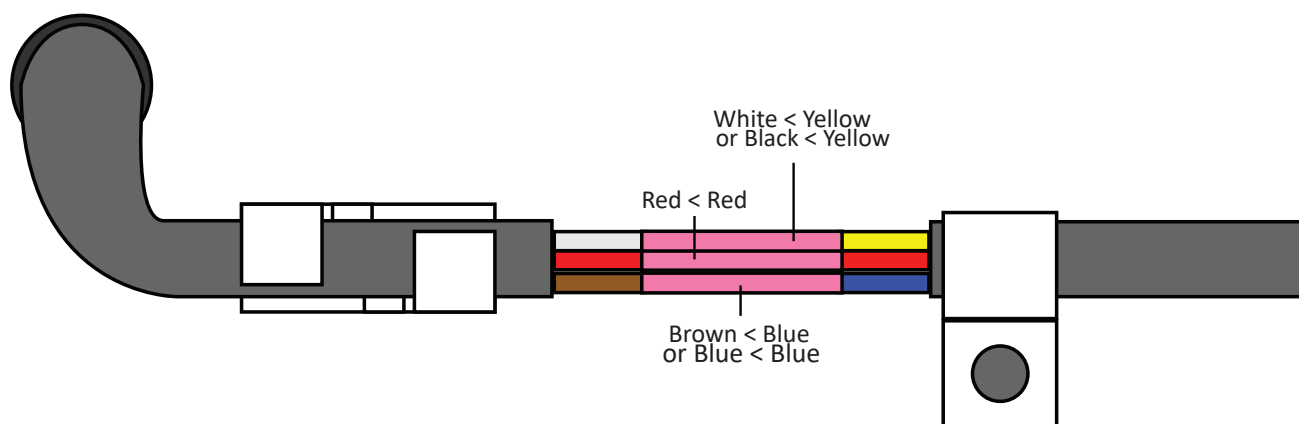

WIRING CONFIGURATION - RAM 2500/3500 2009-2025

Note: Due to the tail light wiring configuration, the top-per's brake light will blink with the left turn signal on all 2019+ Ram Models

After confirming wiring leads, disconnect the vehicle battery prior to any wiring.

***Note:** The following is the recommended method of wiring the third brake light/running light. If you intend on frequently removing the cap, wiring with a quick disconnect is recommended.

After removing driver side factory tail light, disconnect the wire harness, completely removing the tail light.

Enlarge factory hole and drill to 3/8" hole on the driver side in the back of the truck bed to feed the Expedition wiring harness. Use the rubber grommet in the drilled hole to prevent the wiring from chafing.

***Note:** Splices will be used on the brake light bulb wiring. It may be necessary to cut factory loom to gain access to the wires.




Connect the wiring harness based on the color wiring diagram below.

Use the 2 provided Quick Splices and Expedition Cap wiring harness. Provided quick splices are not insulated, it is recommended to cover connections with heat shrink tube and/or electrical tape followed by wire loom to prevent wiring from snagging or being exposed.

Cap Yellow > Ground to Vehicle

Cap Blue > White/Orange Stripe

Cap Red > White/Green Stripe

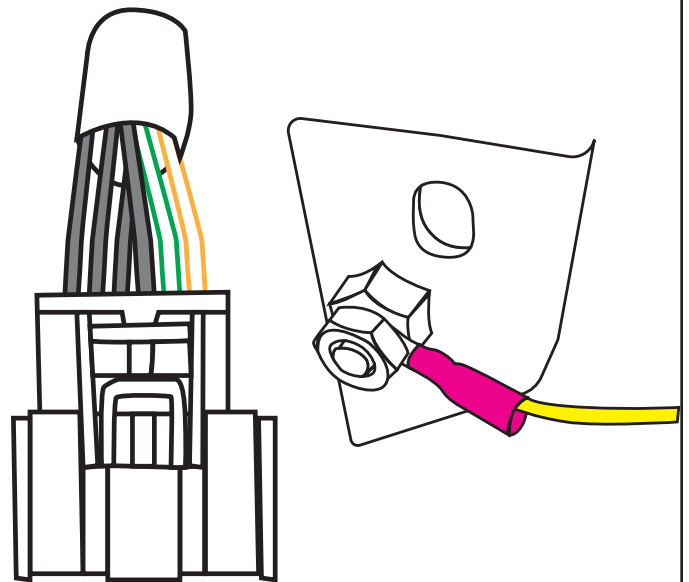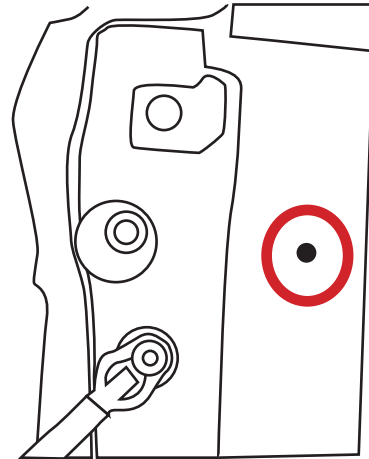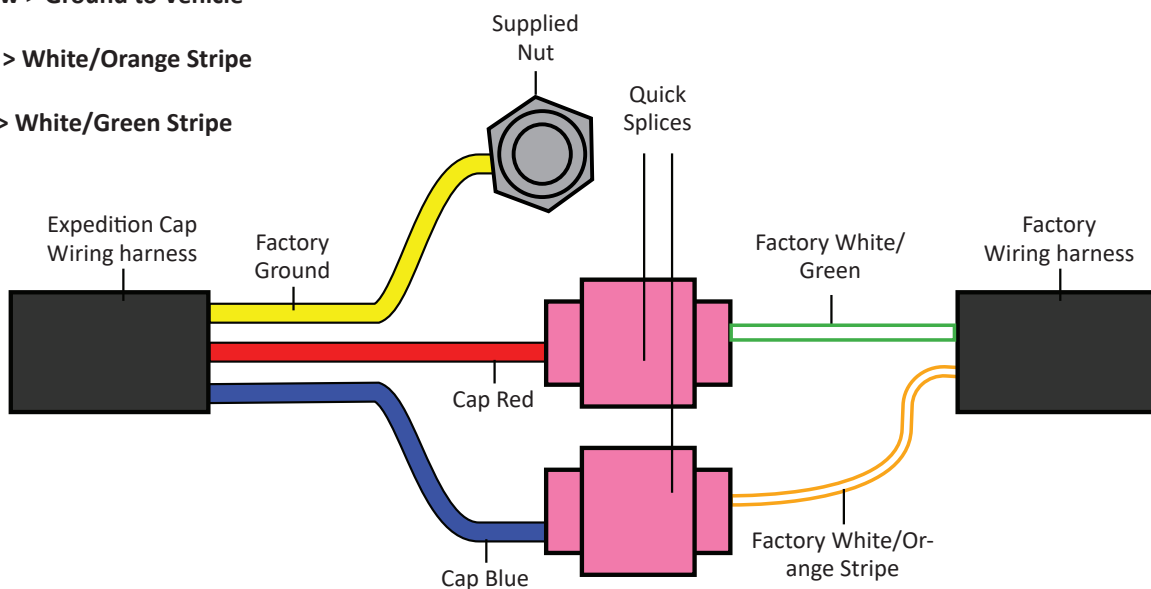


RAM 2500/3500 2009-2025 (CONT.)

2

For the wiring to the 3rd brake light,
Yellow Wire > White Wire
Red Wire > Red Wire
Blue Wire > Brown Wire

Reconnect battery when finished, test light for function.

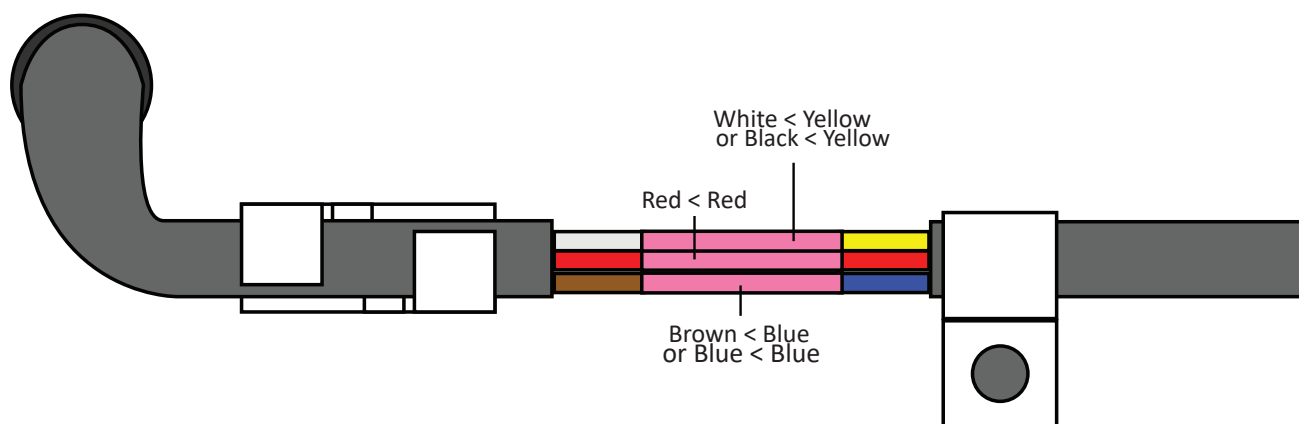

WIRING CONFIGURATION - FORD MAVERICK 2022-2025

After confirming wiring leads, disconnect the vehicle battery prior to any wiring.

***Note:** The following is the recommended method of wiring the third brake light/running light. If you intend on frequently removing the cap, wiring with a quick disconnect is recommended.

After removing driver side factory tail light, disconnect the wire harness, completely removing the tail light.



Enlarge factory hole and drill to 3/8" hole on the driver side in the back of the truck bed to feed the Expedition wiring harness. Use the rubber grommet in the drilled hole to prevent the wiring from chafing.

***Note:** Splices will be used on the brake light bulb wiring. It may be necessary to cut factory loom to gain access to the wires.

Connect the wiring harness based on the color wiring diagram below.

Use the 2 provided Quick Splices and Expedition Cap wiring harness. Provided quick splices are not insulated, it is recommended to cover connections with heat shrink tube and/or electrical tape followed by wire loom to prevent wiring from snagging or being exposed.

Red = Brake
Blue = Running light
Nut = Ground

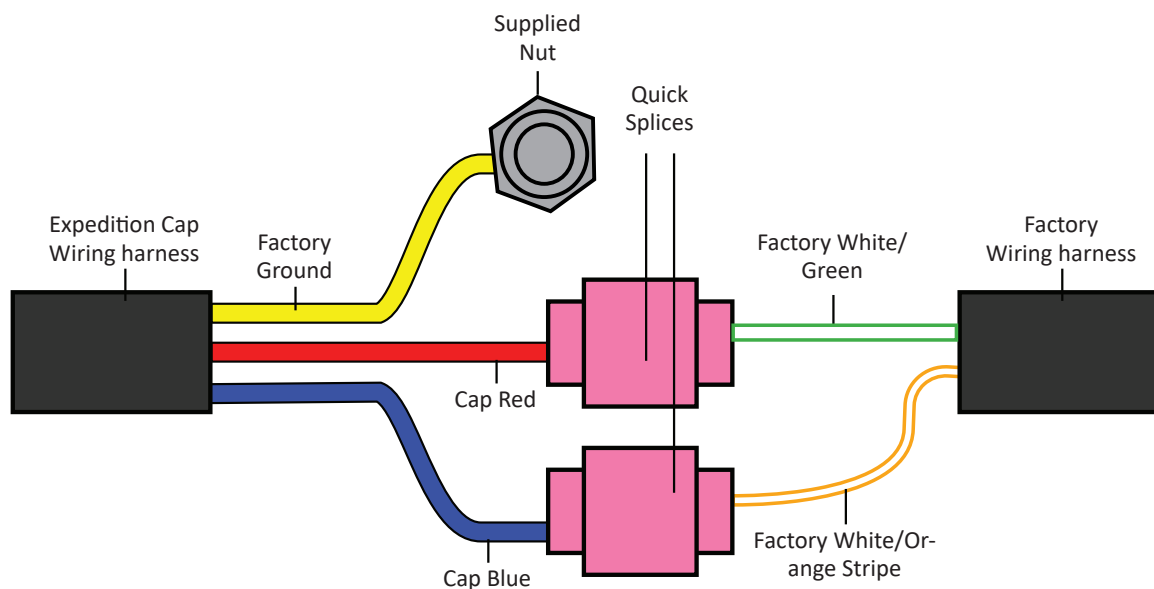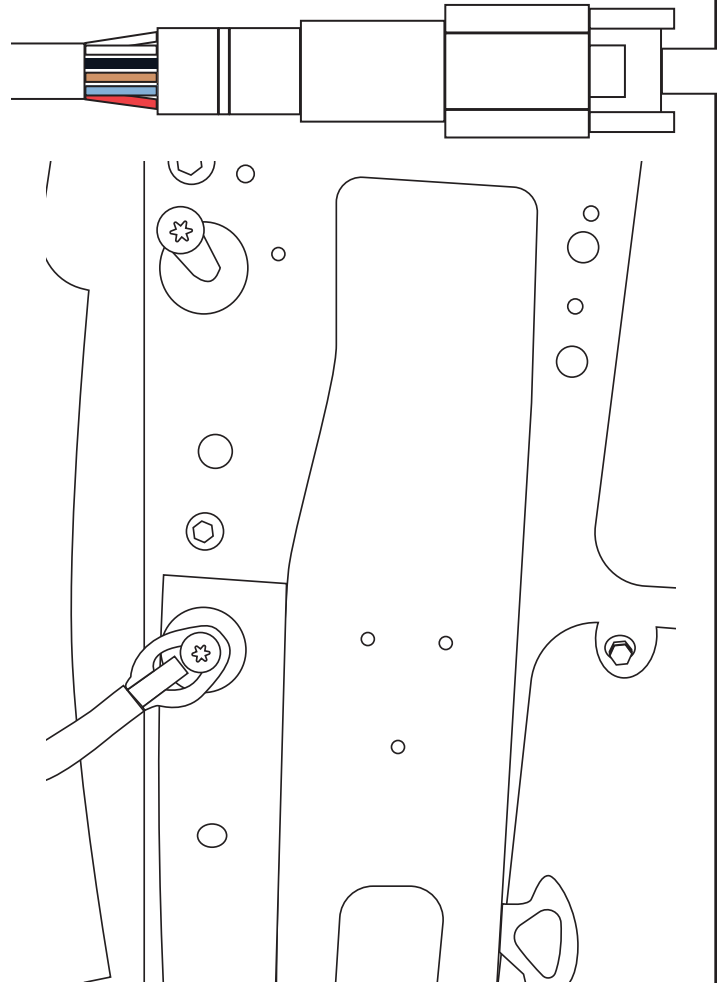


Expedition Truck Cap

SET-UP & CARE INSTRUCTIONS

IT IS HIGHLY RECOMMENDED TO HAVE AUTOMOTIVE ELECTRONICS PROFESSIONAL COMPLETE THE INSTALLATION TO ENSURE THE THIRD BRAKE LIGHT FUNCTIONS CORRECTLY. TALK TO A WIRING SPECIALIST BEFORE SETTING UP THE WIRING PORTION.


FORD MAVERICK 2022-2025 (CONT.)

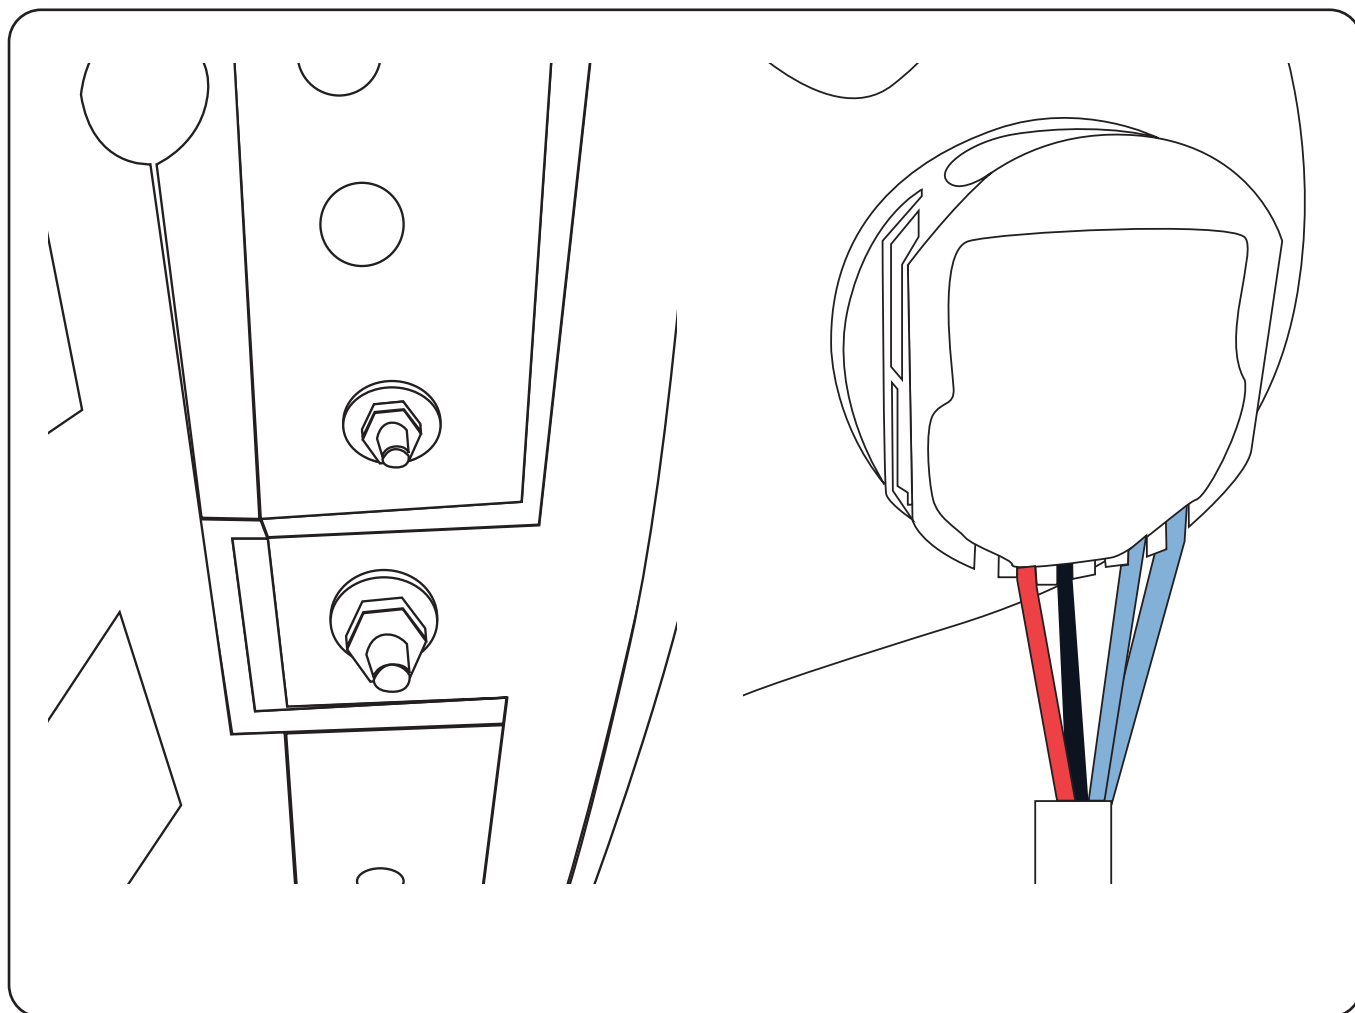

2

For the wiring to the 3rd brake light,
Yellow Wire > White Wire
Red Wire > Red Wire
Blue Wire > Brown Wire

Reconnect battery when finished, test light for function.

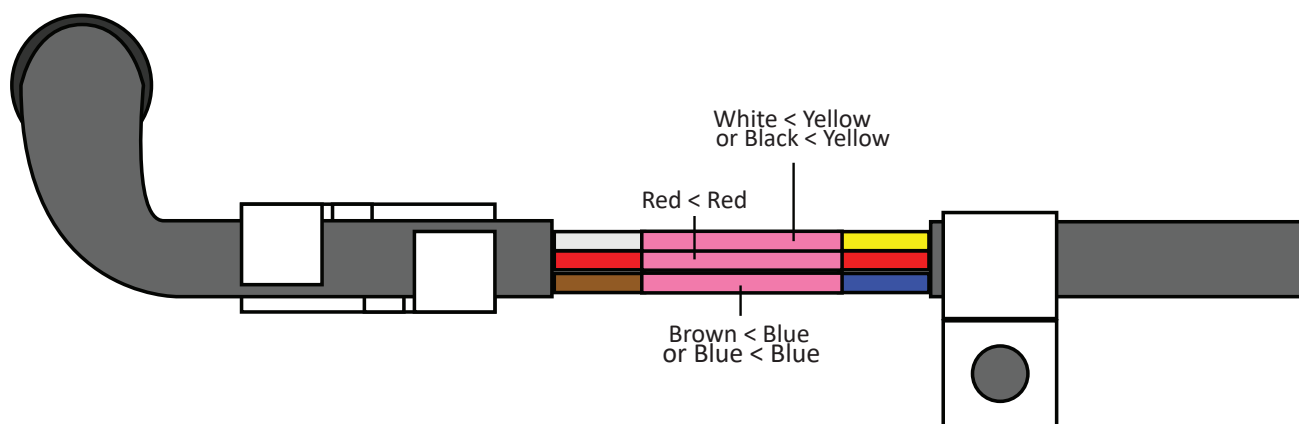


Expedition Truck Cap

SET-UP & CARE INSTRUCTIONS

2024 - 2025 FORD RANGER

1

For any 2024 Next-Gen Ranger built on or before September 19, 2024, Ford requires the installation of Load Box Reinforcement brackets (J-Braces) when adding accessories that extend above the bed rails and weigh more than 88 lbs. These brackets must be installed before mounting an Expedition Cap to maintain your vehicle's factory warranty. The brackets can be purchased from any authorized Ford dealer using Part # VN1WZ2627726A for most trim levels or Part # VN1WZ26277236B for Raptors. Vehicles produced after September 19, 2024, do not require these reinforcements. For further details, refer to your Owner's Manual or contact your selling dealer.

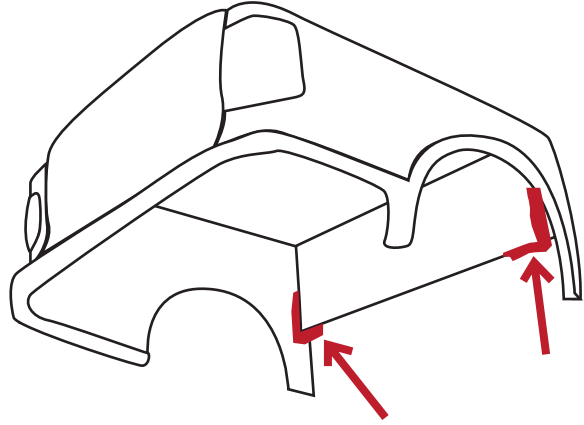

Expedition Truck Cap

SET-UP & CARE INSTRUCTIONS

DECEMBER 2024

CLEANING

Clean with water, automotive detail soaps, and microfiber towels. Do not use automotive wax or polish on textured finish. Do not expose to petrol, diesel, oils, or other harsh chemicals.

STORING

Store in a cool and dry area, when not in use.



WARNINGS

- Always close the tailgate before closing the rear door and always open the rear door before you open the tailgate to prevent damage to the Expedition Truck Cap and Vehicle.
- It is highly recommended to have automotive electronics professional complete the installation to ensure the third brake light functions correctly. Talk to a wiring specialist before setting up the wiring portion.
- Use only the tools recommended.
- Use provided hardware
- It is recommended that 4 people to place cap on vehicle to avoid damaging the vehicle or the cover.
- It is recommended to re-tighten all fasteners after the first 50 miles and every 500 miles thereafter
- We recommend tightening the clamps by hand, once finished, tighten with wrench. Power tool NOT recommended.
- Do not use a heat gun near combustible or flammable materials/atmospheres.



DO YOU NEED OUR HELP?



CUSTOMER SUPPORT 833-226-4863



SALES@OVERLANDVEHICLESYSTEMS.COM

WANT TO SHOW US YOUR RIG?
CHECK OUT OUR SOCIAL!

@overlandvehiclesystems

